
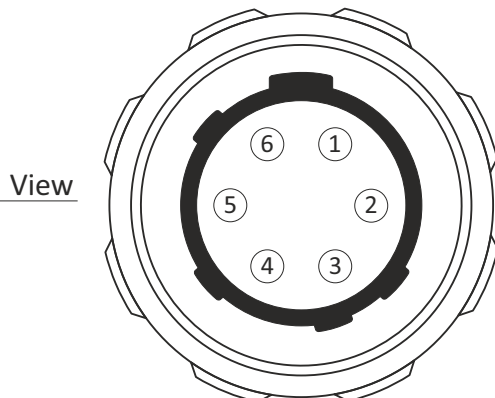


ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	HR10A-7P-6S Solder Type	12 PIN Hirose Fem. Plug Straight
2	1	DC Power Receptacle	5,5mm / 2.1 mm, Cable Mount Mold black
3	1	UI2464 26AWG2C	Cable, PVC, 2 x 26 AWG
4	1	UI2464 26AWG2C	Cable, PVC, 2 x 26 AWG
5	1	BNC Receptacle	BNC Cable Mount Mold black

- [A] DC Power Input (typ. 12V) Please refer to camera manual. Keep isolated when not used as external PWR supply.
- [B] Open Drain Output. Please refer to camera manual. Must be connect to external pullup. Umax 24V Imax 200mA
- [C] OUT GND internally connected to POWER GND.

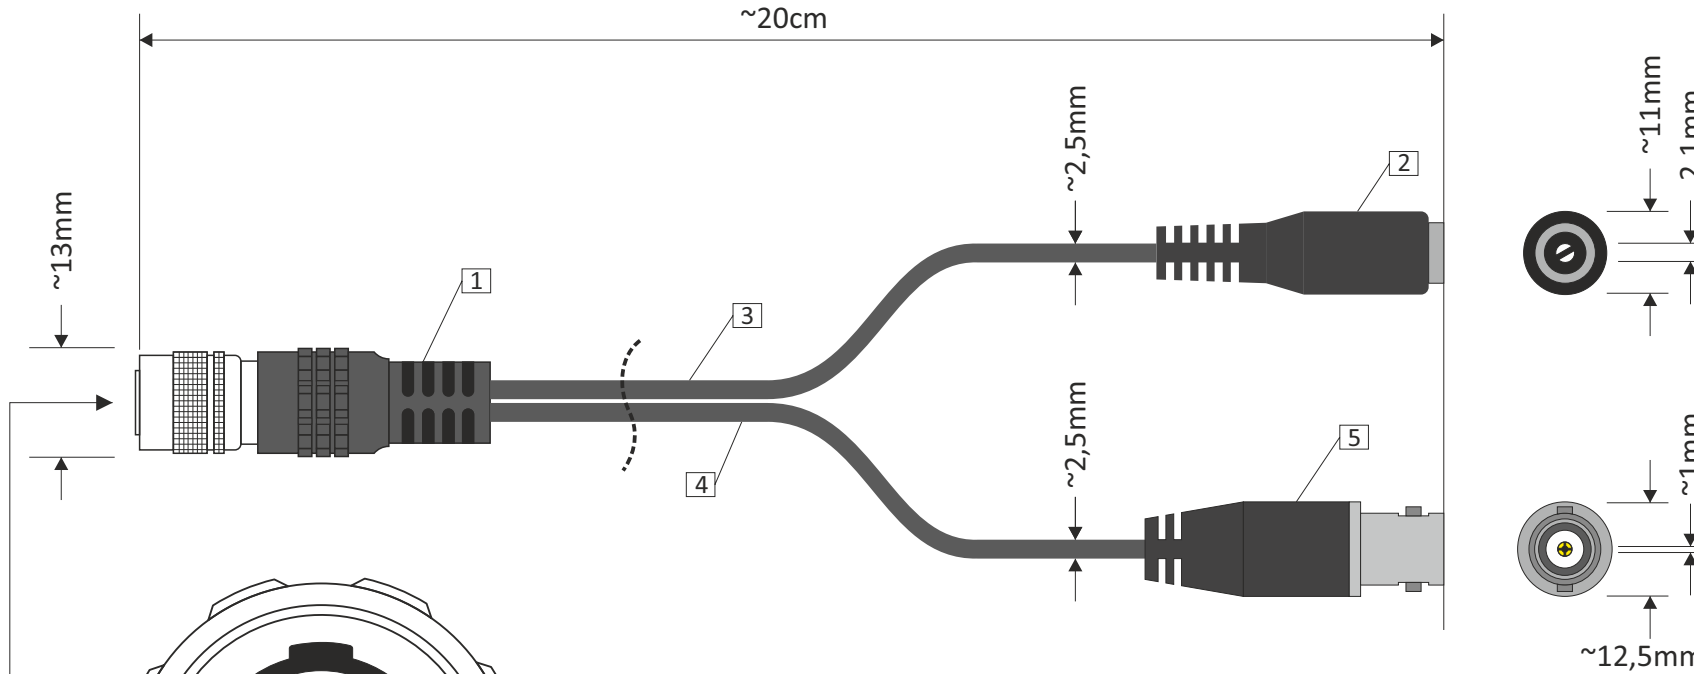

View

HR10A	COLOR	SIGNAL	BNC	DC-Jack
1	WHITE	POWER IN [A]		CENTER
2	WHITE	TRG+	CENTER	
3	SHIELD	TRG-	SCHIELD	
4	NC	OUT+ [B]		
5	NC	OUT GND [C]		
6	SHIELD	POWER GND		SCHIELD
HSG	CLEAR	HOUSING		

NOTE: All relevant materials are compliant with RoHS/REACH directive

6-Pin Hirose Open End Female		General Tolerances ISO 2768-1 (medium)	Projection
Art. No.: Gige23PWRTrig	All Rights Reserved Copyright by DIN34	Drafter:	Date:
Mfg. Type: A112-A029-V24	Drawn:	Martin Teuber	2025-08-04
TIS-PN: 20800000025	Revision:		
Document Name: TISC-0006	Revision:		
 <b>The Imaging Source Europe GmbH</b> Überseetor 18 28237 Bremen/Germany ☎+49421335910 www.theimagingsource.com ✉	Revision:		
	Revision:		
	Revision:		
M 1:1	Page Size: A4	Page: 1 # 1	