



# DFK 38UX540

## Technical Reference Manual



|                                                       |           |
|-------------------------------------------------------|-----------|
| <b>1. Quick Facts</b>                                 | <b>5</b>  |
| <b>2. Dimensional Diagrams</b>                        | <b>7</b>  |
| 2.1 DFK 38UX540 C-Mount with Tripod Adapter .....     | 7         |
| 2.2 DFK 38UX540 C-Mount without Tripod Adapter .....  | 8         |
| 2.3 DFK 38UX540 CS-Mount with Tripod Adapter .....    | 9         |
| 2.4 DFK 38UX540 CS-Mount without Tripod Adapter ..... | 10        |
| <b>3. I/O Connector</b>                               | <b>11</b> |
| 3.1 12-pin I/O Connector .....                        | 11        |
| 3.1.1 TRIGGER_IN .....                                | 12        |
| 3.1.2 STROBE_OUT .....                                | 12        |
| <b>4. Spectral Characteristics</b>                    | <b>13</b> |
| 4.1 IR-Cut Filter .....                               | 13        |
| 4.2 Spectral Sensitivity - IMX540-AAQJ-C .....        | 13        |
| <b>5. Camera Controls</b>                             | <b>14</b> |
| 5.1 Sensor Readout Control .....                      | 14        |
| 5.1.1 Pixel Format .....                              | 14        |
| 5.1.1.1 8-Bit Bayer Raw .....                         | 15        |
| 5.1.1.2 12-Bit Packed Bayer Raw .....                 | 15        |
| 5.1.1.3 16-Bit Bayer Raw .....                        | 15        |
| 5.1.1.4 YUV 4:2:2 .....                               | 16        |
| 5.1.1.5 YUV 4:1:1 .....                               | 16        |
| 5.1.1.6 RGB24 .....                                   | 16        |
| 5.1.1.7 8-Bit Monochrome .....                        | 17        |
| 5.1.2 Resolution .....                                | 17        |
| 5.1.3 Readout Modes .....                             | 18        |
| 5.1.4 Frame Rate .....                                | 19        |
| 5.1.5 Partial Scan Offset .....                       | 21        |
| 5.1.6 Image Flipping .....                            | 23        |
| 5.2 Image Sensor Control .....                        | 23        |
| 5.2.1 Exposure Time .....                             | 23        |
| 5.2.2 Gain .....                                      | 24        |
| 5.2.3 Black Level .....                               | 24        |
| 5.3 Automatic Exposure and Gain Control .....         | 24        |
| 5.3.1 Auto Exposure .....                             | 25        |
| 5.3.2 Auto Gain .....                                 | 25        |
| 5.3.3 Auto Reference Value .....                      | 25        |
| 5.3.4 Highlight Reduction .....                       | 26        |
| 5.3.5 Auto Exposure Limits .....                      | 26        |
| 5.3.6 Auto Gain Limits .....                          | 27        |
| 5.4 Trigger .....                                     | 28        |



|             |                                                    |           |
|-------------|----------------------------------------------------|-----------|
| 5.4.1       | Trigger Mode .....                                 | 28        |
| 5.4.2       | Trigger Polarity .....                             | 28        |
| 5.4.3       | Software Trigger .....                             | 29        |
| 5.4.4       | Trigger Exposure Mode .....                        | 29        |
| 5.4.5       | Trigger Burst Count .....                          | 30        |
| 5.4.6       | Trigger Source .....                               | 30        |
| 5.4.7       | IMX Low-Latency Mode .....                         | 31        |
| 5.4.8       | Trigger Overlap .....                              | 31        |
| 5.4.9       | Trigger Delay .....                                | 32        |
| <b>5.5</b>  | <b>Trigger Timing Parameters .....</b>             | <b>32</b> |
| 5.5.1       | Trigger Debounce Time .....                        | 32        |
| 5.5.2       | Trigger Mask Time .....                            | 33        |
| 5.5.3       | Trigger Noise Suppression Time .....               | 33        |
| <b>5.6</b>  | <b>Digital I/O .....</b>                           | <b>34</b> |
| 5.6.1       | General Purpose Input .....                        | 34        |
| 5.6.2       | General Purpose Output .....                       | 34        |
| <b>5.7</b>  | <b>Strobe .....</b>                                | <b>35</b> |
| 5.7.1       | Strobe Enable .....                                | 35        |
| 5.7.2       | Strobe Polarity .....                              | 35        |
| 5.7.3       | Strobe Operation .....                             | 35        |
| 5.7.4       | Strobe Duration .....                              | 36        |
| 5.7.5       | Strobe Delay .....                                 | 36        |
| <b>5.8</b>  | <b>White Balance .....</b>                         | <b>37</b> |
| 5.8.1       | Auto White Balance .....                           | 37        |
| 5.8.2       | White Balance Mode .....                           | 37        |
| 5.8.3       | Manual White Balance .....                         | 38        |
| <b>5.9</b>  | <b>Image Processing .....</b>                      | <b>40</b> |
| 5.9.1       | Gamma .....                                        | 40        |
| 5.9.2       | Lookup Table .....                                 | 41        |
| <b>5.10</b> | <b>Color Processing .....</b>                      | <b>42</b> |
| 5.10.1      | Hue .....                                          | 42        |
| 5.10.2      | Saturation .....                                   | 43        |
| <b>5.11</b> | <b>Region of Interest for Auto Functions .....</b> | <b>43</b> |
| 5.11.1      | Auto Functions ROI Enable .....                    | 43        |
| 5.11.2      | Auto Functions ROI Preset .....                    | 44        |
| 5.11.3      | Auto Functions ROI Custom Rectangle .....          | 44        |
| <b>5.12</b> | <b>User Sets .....</b>                             | <b>46</b> |
| 5.12.1      | User Set Selector .....                            | 46        |
| 5.12.2      | Load User Set .....                                | 46        |
| 5.12.3      | Save User Set .....                                | 47        |
| 5.12.4      | Default User Set .....                             | 47        |
| <b>5.13</b> | <b>Multi-Frame Output Mode .....</b>               | <b>47</b> |
| 5.13.1      | Multi-Frame Output Mode Enable .....               | 47        |



|             |                                             |           |
|-------------|---------------------------------------------|-----------|
| 5.13.2      | Multi-Frame Output Mode Frame Count .....   | 48        |
| 5.13.3      | Multi-Frame Output Mode Exposure Time ..... | 48        |
| 5.13.4      | Multi-Frame Output Mode Custom Gain .....   | 49        |
| 5.13.5      | Multi-Frame Output Mode Gain .....          | 49        |
| <b>5.14</b> | <b>Timestamp Control .....</b>              | <b>50</b> |
| 5.14.1      | Timestamp Latch .....                       | 50        |
| 5.14.2      | Timestamp Latch Value .....                 | 50        |
| 5.14.3      | Timestamp Reset .....                       | 51        |
| <b>5.15</b> | <b>Events .....</b>                         | <b>51</b> |
| 5.15.1      | Event Selector .....                        | 51        |
| 5.15.2      | Event Notification .....                    | 52        |
| 5.15.3      | Event Exposure End .....                    | 52        |
| 5.15.4      | Event Frame Trigger Missed .....            | 53        |
| 5.15.5      | Event Line1 Falling Edge .....              | 53        |
| 5.15.6      | Event Line1 Rising Edge .....               | 54        |
| 5.15.7      | Event Test .....                            | 54        |
| <b>5.16</b> | <b>Chunk Data .....</b>                     | <b>55</b> |
| 5.16.1      | Chunk Mode Active .....                     | 55        |
| 5.16.2      | Chunk Selector .....                        | 55        |
| 5.16.3      | Chunk Enable .....                          | 56        |
| 5.16.4      | Chunk Exposure Time .....                   | 56        |
| 5.16.5      | Chunk Gain .....                            | 56        |
| <b>5.17</b> | <b>Bandwidth Control .....</b>              | <b>56</b> |
| 5.17.1      | Device Link Throughput Limit Mode .....     | 57        |
| 5.17.2      | Device Link Throughput Limit .....          | 57        |
| <b>6.</b>   | <b>Status LEDs .....</b>                    | <b>58</b> |
| 6.1         | RGB Status LED .....                        | 58        |
| <b>7.</b>   | <b>Revision History .....</b>               | <b>59</b> |



## 1 Quick Facts

| General                       |                                                                                                                          |
|-------------------------------|--------------------------------------------------------------------------------------------------------------------------|
| Vision Standard               | USB3 Vision                                                                                                              |
| Dynamic Range                 | 12 bit                                                                                                                   |
| Resolution                    | 5320x4600                                                                                                                |
| Frame Rate at Full Resolution | 15                                                                                                                       |
| Pixel Formats                 | 8-Bit Monochrome<br>8-Bit Bayer (RG)<br>12-Bit Bayer Packed (RG)<br>16-Bit Bayer (RG)<br>RGB24<br>YUV 4:2:2<br>YUV 4:1:1 |

| Optical Interface |                    |
|-------------------|--------------------|
| IR-Cut filter     | Yes                |
| Sensor Type       | Sony IMX540-AAQJ-C |
| Shutter Type      | Global             |
| Sensor Format     | 1.2 inch           |
| Pixel Size        | 2.74 $\mu\text{m}$ |
| Lens Mount        | C (CS optional)    |

| Electrical Interface |                                                                         |
|----------------------|-------------------------------------------------------------------------|
| Interface            | USB 3.1gen1                                                             |
| Supply Voltage       | 4.75 VDC to 5.25 VDC                                                    |
| Current Consumption  | approx 880 mA @ 5 VDC                                                   |
| I/O Connector        | 12-pin connector for trigger and strobe or general purpose input/output |

| Mechanical Data |                              |
|-----------------|------------------------------|
| Dimensions      | H: 29 mm, W: 44 mm, L: 60 mm |
| Mass            | 110 g                        |




| Adjustments |                  |
|-------------|------------------|
| Shutter     | 1 $\mu$ s to 4 s |
| Gain        | 0 dB to 48 dB    |


| Environmental Conditions        |                               |
|---------------------------------|-------------------------------|
| Housing Temperature (operating) | -5 °C to 50 °C                |
| Temperature (storage)           | -20 °C to 80 °C               |
| Humidity (operating)            | 20 % to 80 % (non-condensing) |
| Humidity (storage)              | 20 % to 95 % (non-condensing) |

## 2 Dimensional Diagrams


### 2.1 DFK 38UX540 C-Mount with Tripod Adapter

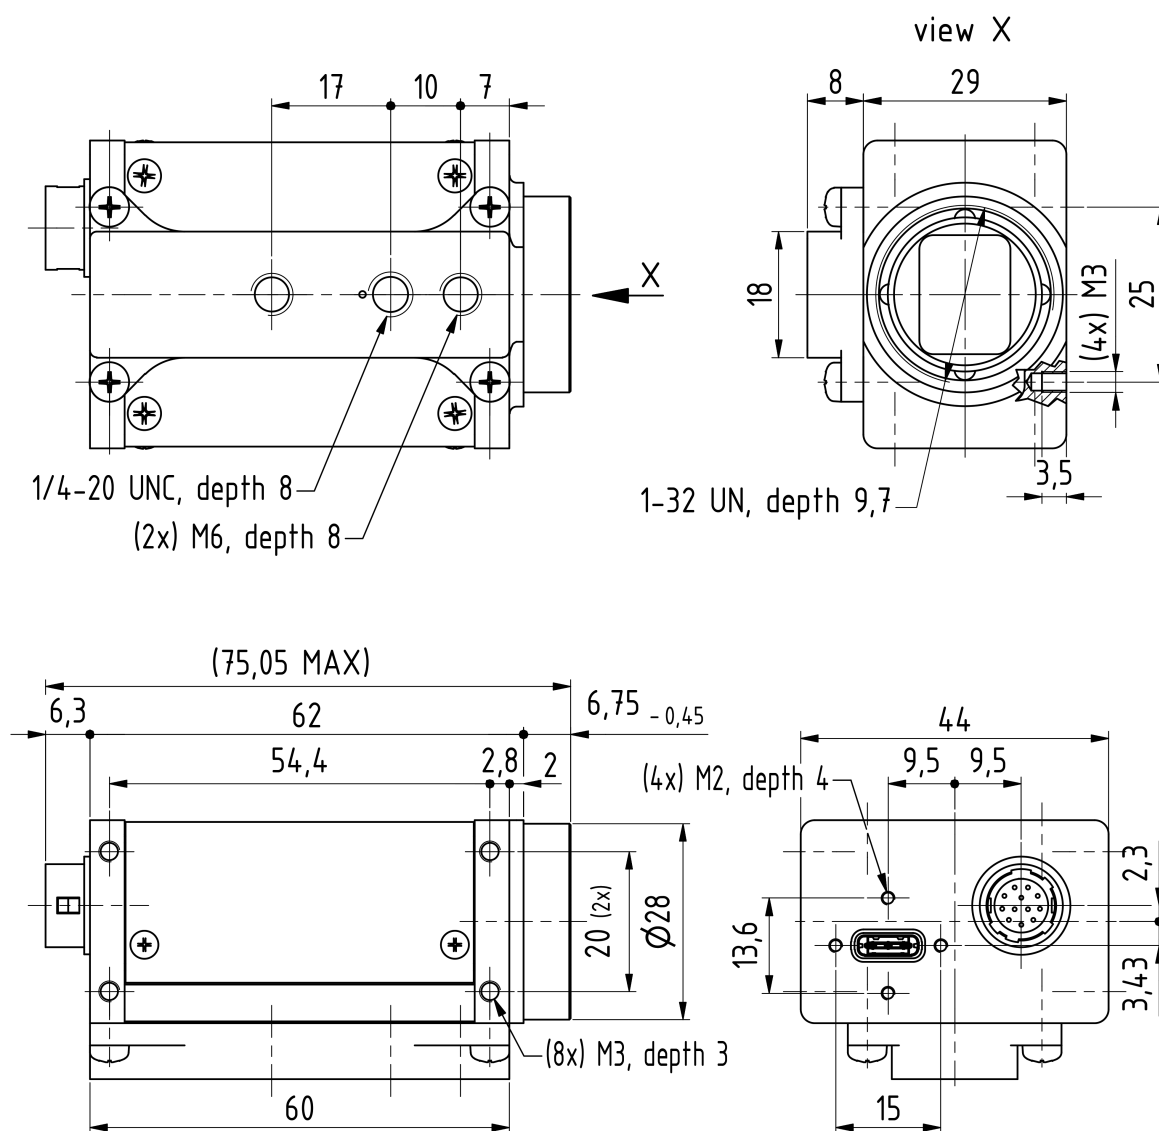

Dimensions: mm  
Tolerances: DIN ISO 2768-f




## 2.2 DFK 38UX540 C-Mount without Tripod Adapter

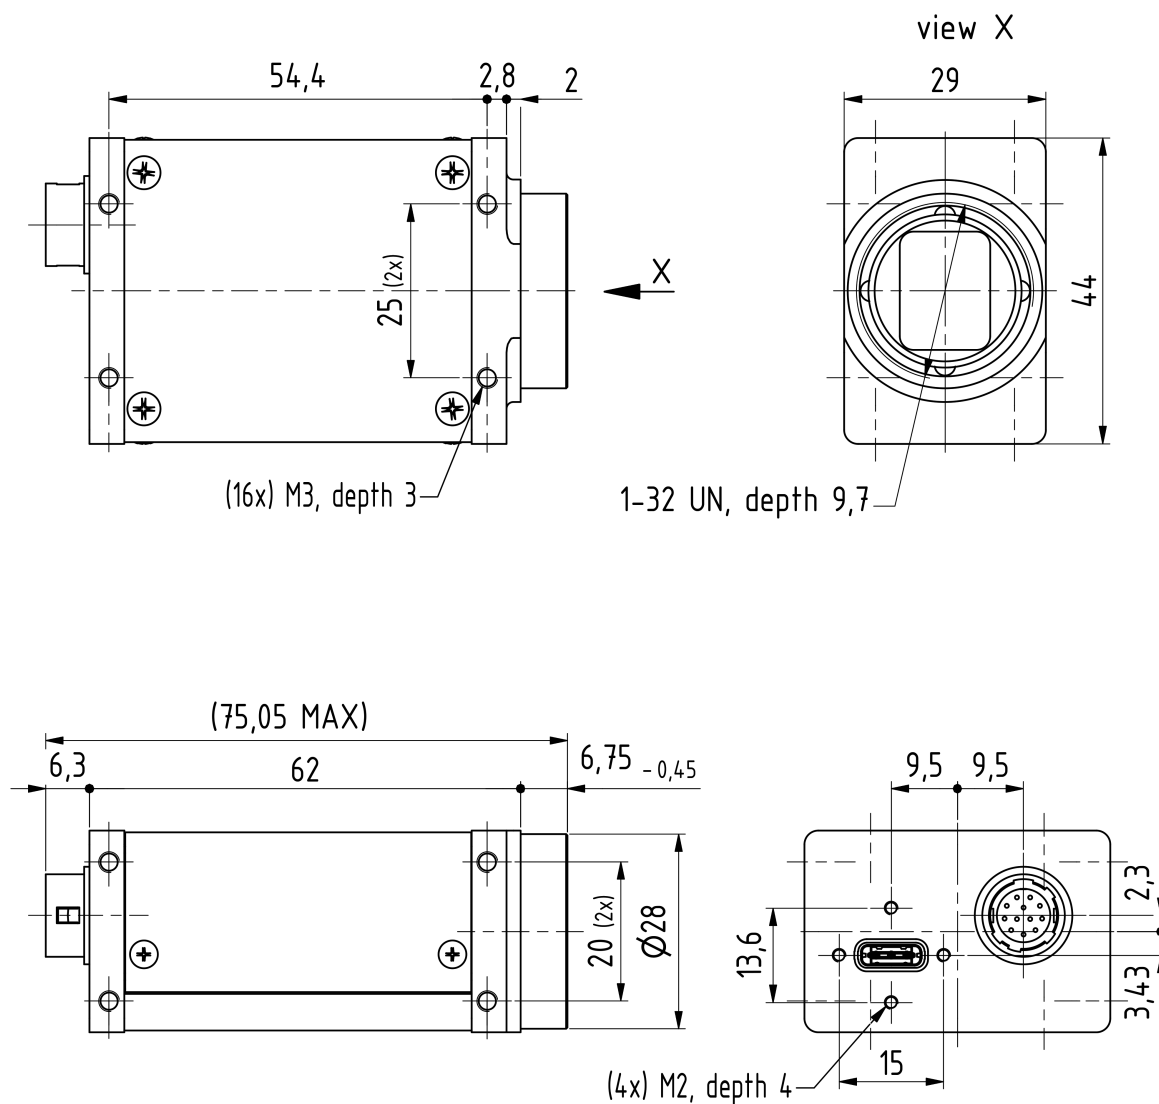


Dimensions: mm  
Tolerances: DIN ISO 2768-f




## 2.3 DFK 38UX540 CS-Mount with Tripod Adapter

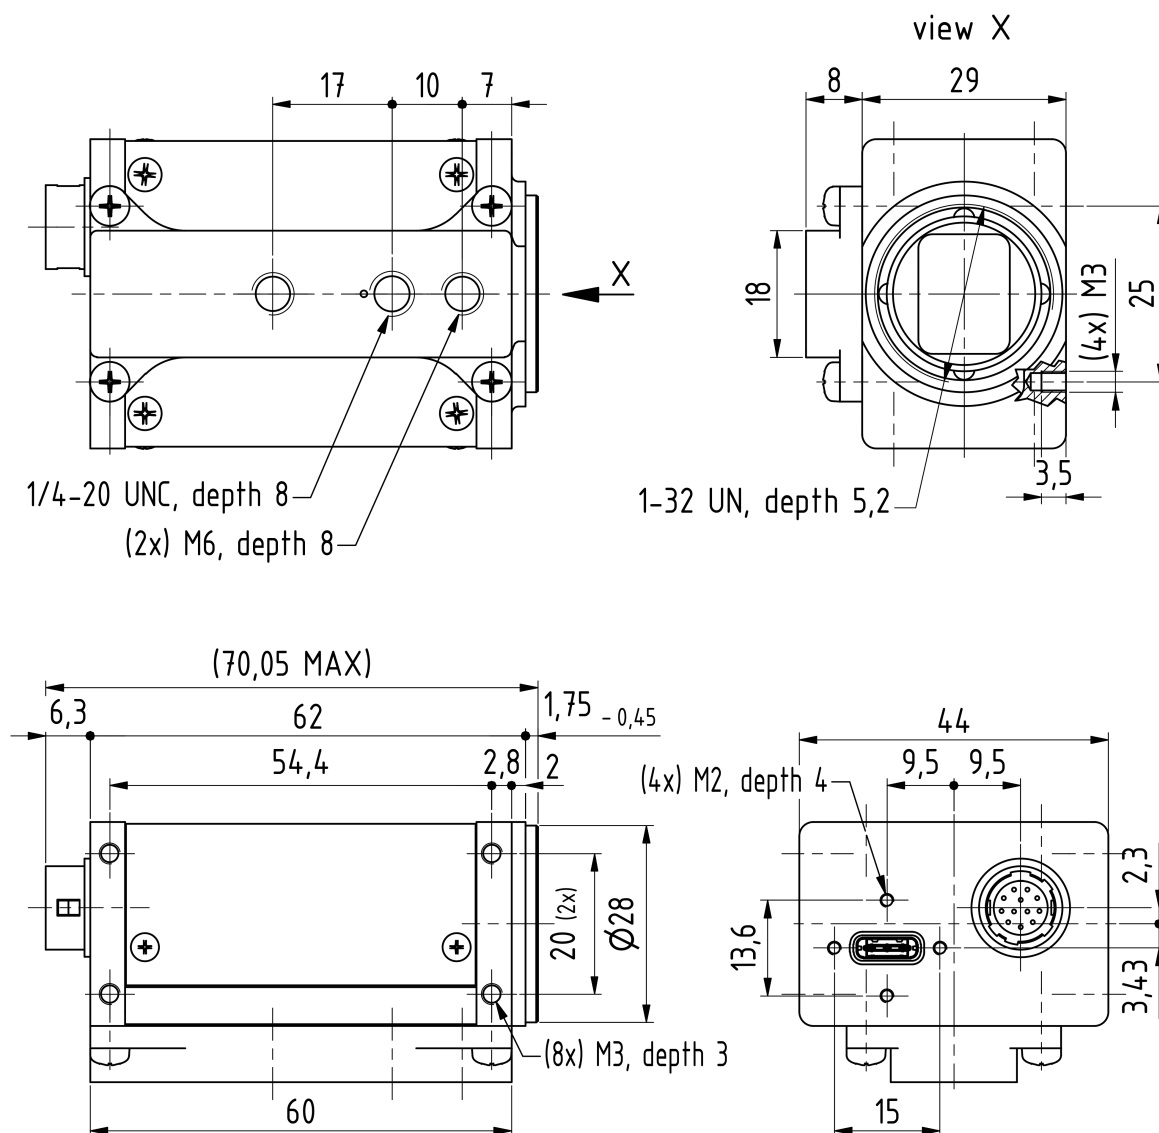

Dimensions: mm  
Tolerances: DIN ISO 2768-f



## 2.4 DFK 38UX540 CS-Mount without Tripod Adapter

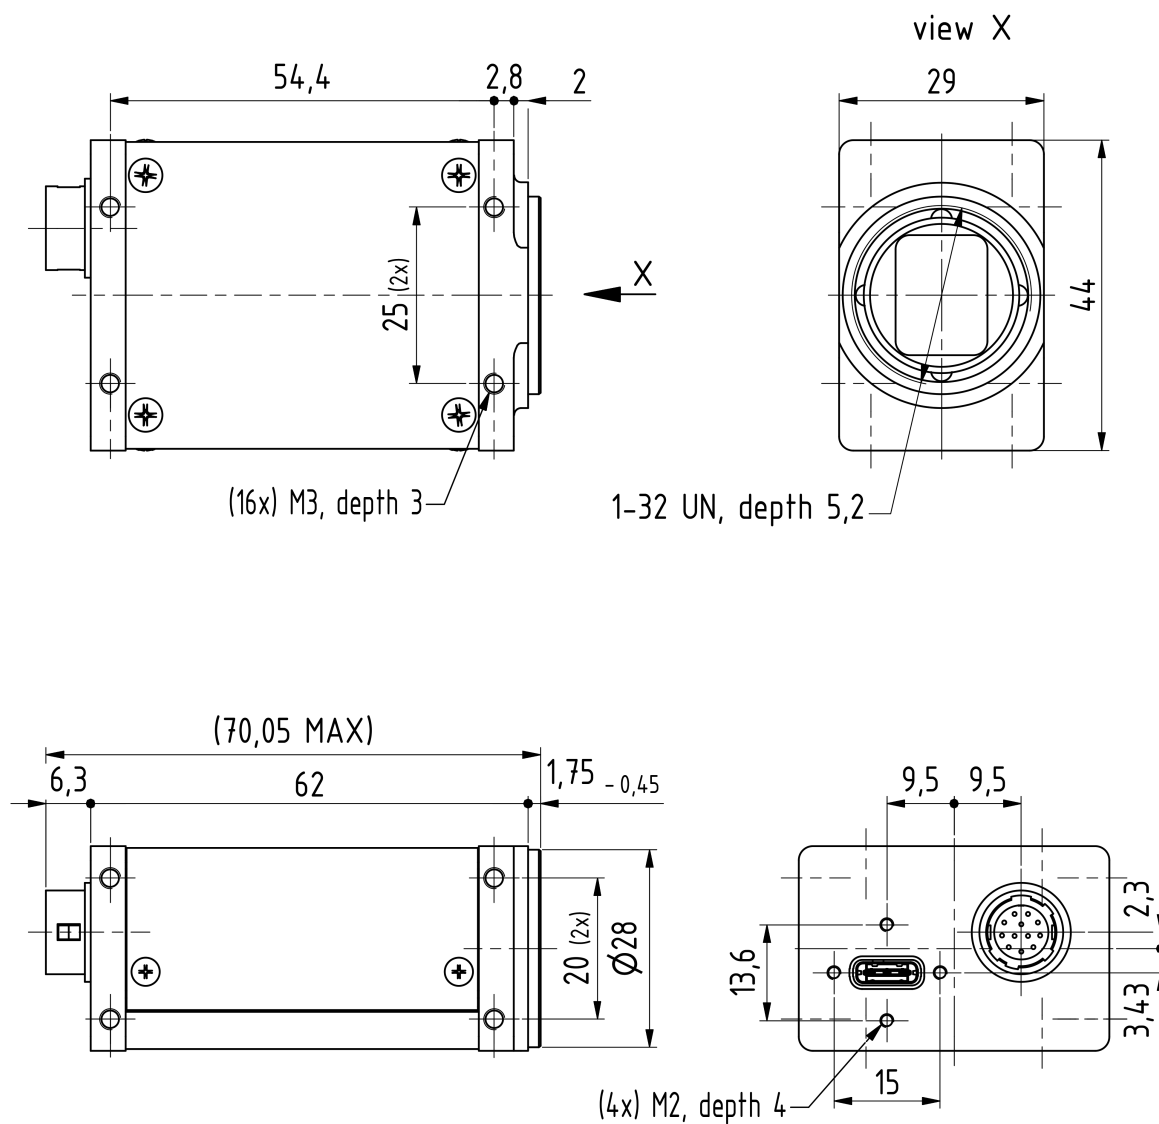


Dimensions: mm

Tolerances: DIN ISO 2768-f



## 3 I/O Connector

### 3.1 12-pin I/O Connector

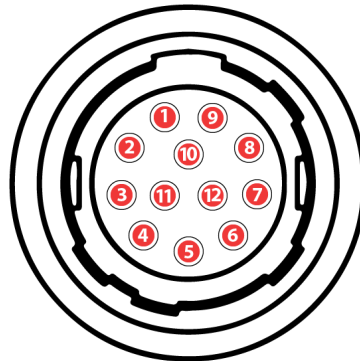

Rear view of camera

| Pin | Signal         | I/O            | Remarks            | Characteristics  |     |                   |      |
|-----|----------------|----------------|--------------------|------------------|-----|-------------------|------|
|     |                |                |                    | Min              | Typ | Max               | Unit |
| 1   | do not use     |                | -                  | -                | -   | -                 | -    |
| 2   | do not use     |                | -                  | -                | -   | -                 | -    |
| 3   | n.c.           |                | -                  | -                | -   | -                 | -    |
| 4   | n.c.           |                | -                  | -                | -   | -                 | -    |
| 5   | n.c.           |                | -                  | -                | -   | -                 | -    |
| 6   | n.c.           |                | -                  | -                | -   | -                 | -    |
| 7   | GND_I/O        | G <sup>3</sup> | External Ground    | -                | -   | -                 | -    |
| 8   | n.c.           |                | -                  | -                | -   | -                 | -    |
| 9   | n.c.           |                | -                  | -                | -   | -                 | -    |
| 10  | STROBE_OUT     | O <sup>3</sup> | Open drain         | -                | -   | 24.0 <sup>1</sup> | V    |
| 11  | TRIGGER_IN (+) | I <sup>3</sup> | Optocoupler signal | 3.3 <sup>2</sup> | -   | 24.0 <sup>2</sup> | V    |
| 12  | TRIGGER_IN (-) | I <sup>3</sup> | Optocoupler ground | -                | -   | -                 | -    |

<sup>1</sup> max. 0.2A (ID) for open drain MOSFET!

<sup>2</sup> min. 3.5 mA driver strength required!

<sup>3</sup> G: Ground O: Output I: Input

The part number of this Hirose connector is HR10A10R-12P(73). To create an I/O cable you need a Hirose connector HR10A-10P-12S(73).



## 3.1.1 TRIGGER\_IN

The *TRIGGER\_IN* line can be used to synchronize the start of the exposure time with external events. The [Trigger](#) section describes in detail how the image sensor's behavior can be controlled.

The current input signal can also be read directly through the [General Purpose Input](#) feature.

## 3.1.2 STROBE\_OUT


The *STROBE\_OUT* line's main usage is to indicate the integration time of the image sensor which allows flashes, strobes or other light sources to be synchronized with camera operation. The line's behavior can be controlled through the [Strobe](#) controls.

The output signal can also be directly controlled through the [General Purpose Output](#) feature.




## 4 Spectral Characteristics

### 4.1 IR-Cut Filter

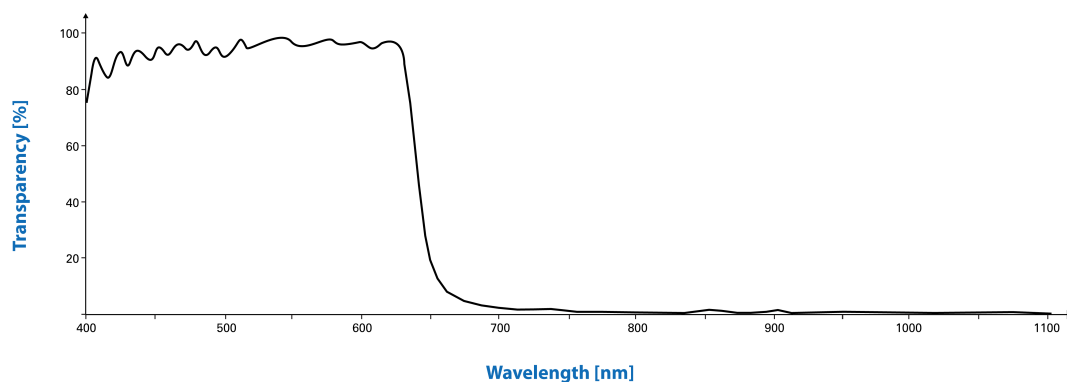

### 4.2 Spectral Sensitivity - IMX540-AAQJ-C

Sensor: Sony IMX540/541/542 *courtesy of Sony Deutschland GmbH*

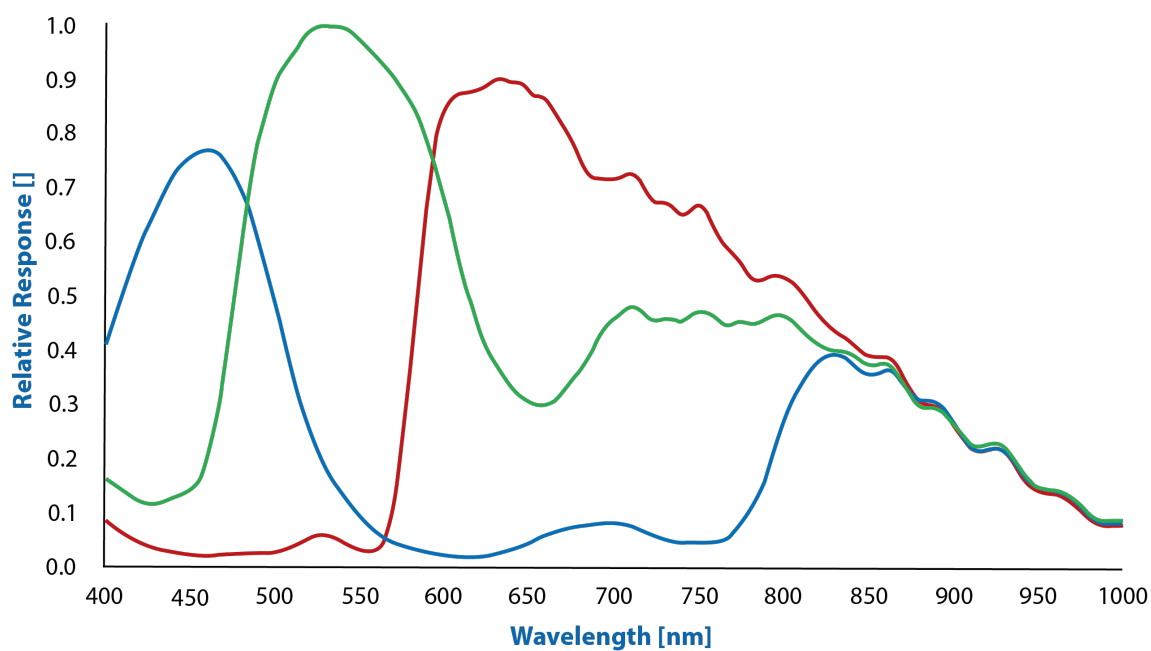



## 5 Camera Controls

This section describes the parameters available for the DFK 38UX540 camera.

The actual name of the parameter depends on the driver technology used to access the camera. Parameter names are listed for the most common ways to access the cameras:

- *USB3 Vision (IC Imaging Control 4, or via 3rd party driver)*
- *UVC/V4L2 (on Linux, via uvcvideo)*
- *IC Imaging Control 3.x (on Windows, via Device Driver for The Imaging Source USB 33U, 37U and 38U Cameras)*

Please note: When the camera is connected to a USB2 controller and used in V4L2 mode or by *IC Imaging Control 3.x*, read requests can lead to frame drops. Avoid reading camera features to ensure a stable image transmission.

### 5.1 Sensor Readout Control

#### 5.1.1 Pixel Format

The pixel format defines the data type of the pixels transmitted to the computer. The bits per pixel needed for a particular pixel format influence the required bandwidth.

The driver technology used to access the camera significantly impacts the way the pixel format is controlled:

- When using *IC Imaging Control 4* or *USB3 Vision*, the pixel format is controlled through the `PixelFormat GenICam` feature.
- When using the `uvcvideo` driver on Linux, the pixel format is defined by `video4linux2`.
- When using *IC Imaging Control 3.x*, the pixel format is part of the video format - a parameter which combines pixel format, resolution and readout mode. For more information, refer to the *IC Imaging Control 3.x* documentation sections on `VideoFormat` and `VideoFormatDesc`.

The DFK 38UX540 color camera supports multiple pixel formats with variable bits-per-pixel settings. The names of the pixel formats and the way to select them depends on the driver used to control the camera. The following table contains a short overview of all possible formats followed by a more detailed description.

| Pixel Format             | Bits Per Pixel | USB3 Vision         | UVC   | TIS UVC Driver |
|--------------------------|----------------|---------------------|-------|----------------|
| 8-Bit Bayer (RG)         | 8              | BayerRG8            | RGGG  | RGB32, Y800    |
| 12-Bit Packed Bayer (RG) | 12             | BayerRG12p          | RGCp  | RGB64, Y16     |
| 16-Bit Bayer (RG)        | 16             | BayerRG16           | RG16  | RGB64, Y16     |
| YUV 4:2:2                | 16             | YCbCr422_8          | YUY2  | YUY2           |
| YUV 4:1:1 (a)            | 12             | YCbCr411_8          |       |                |
| YUV 4:1:1 (b)            | 12             | YCbCr411_8_CbYYCrYY | Y411  | Y411           |
| RGB24                    | 24             | BGR8                | RGB24 | RGB24          |
| 8-Bit Monochrome         | 8              | Mono8               |       |                |

## 5.1.1.1 8-Bit Bayer Raw

This format transmits data using one byte for each pixel.

*USB3 Vision* drivers see this pixel format as one of the 8-bit bayer raw formats (BayerGR8, BayerRG8, BayerGB8, BayerBG8).

UVC drivers see it with the *FourCC* GRBG, RGGG, GBRG or BA81.

The *Device Driver for The Imaging Source USB 33U, 37U and 38U Cameras* simplifies this variety of possible pixel formats and offers two video formats instead: RGB32 and Y800. The RGB32 format results from the driver's automatic debayering of the raw image data, while the Y800 format contains the raw data which is reinterpreted as monochrome.

## 5.1.1.2 12-Bit Packed Bayer Raw

This format transmits data using 3 bytes for each pair of 2 consecutive pixels.

*USB3 Vision* drivers see this pixel format as one of the 12-bit packed bayer raw formats (BayerGR12p, BayerRG12p, BayerGB12p, BayerBG12p).

UVC drivers see it with the *FourCC* GRCp, RGCp, GBCp or BGCp.

The *Device Driver for The Imaging Source USB 33U, 37U and 38U Cameras* simplifies this variety of possible pixel formats and offers two video formats instead: RGB64 and Y16. The RGB64 format results from the driver's automatic debayering of the raw image data, while the Y16 format contains the raw data which is reinterpreted as monochrome. Since the DFK 38UX540 camera offers both 12-bit packed and 16-bit bayer raw pixel formats, the driver uses the 12-bit packed format when the RGB64 or Y16 video format is selected.

## 5.1.1.3 16-Bit Bayer Raw

This format transmits data using 2 bytes for each pixel.



The sensor of the DFK 38UX540 camera is not able to provide 16-bit data output. The pixel data is transmitted in the most significant bits. This allows application programs to ignore the sensor-specific data type and to treat the data as if the sensor outputs 16 bits.

*USB3 Vision* drivers see this pixel format as one of the 16-bit packed bayer raw formats (BayerGR16, BayerRG16, BayerGB16, BayerBG16).

UVC drivers see it with the *FourCC* GR16, RG16, GB16 or BA16.

The *Device Driver for The Imaging Source USB 33U, 37U and 38U Cameras* simplifies this variety of possible pixel formats and offers two video formats instead: RGB64 and Y16. The RGB64 format results from the driver's automatic debayering the raw image data, while the Y16 format contains the raw data which is reinterpreted as monochrome.

## 5.1.1.4 YUV 4:2:2

This format transmits an 8-bit luminance value for every pixel and a pair of chrominance values for every two pixels.

The camera converts the raw pixel data from the sensor to YUV 4:2:2. Since YUV 4:2:2 averages to 2 bytes per pixel, the YUV 4:2:2 pixel format requires two times the bandwidth of the 8-bit raw format, thus reducing the maximum possible frame rate.

*USB3 Vision* drivers see this pixel format as YCbCr422\_8.

UVC drivers see it with the *FourCC* YUY2.

The *Device Driver for The Imaging Source USB 33U, 37U and 38U Cameras* offers this pixel format as the YUY2 video format.

## 5.1.1.5 YUV 4:1:1

This format transmits an 8-bit luminance value for every pixel and a pair of chrominance values for every four pixels.

The two YUV 4:1:1 pixel formats only differ in their byte order.

The camera converts the raw pixel data from the sensor to YUV 4:2:2. Since YUV 4:2:2 averages to 1.5 bytes per pixel, the YUV 4:1:1 pixel format requires 50% more bandwidth than the 8-bit raw format, thus reducing the maximum possible frame rate.

*USB3 Vision* drivers see this pixel format as YCbCr411\_8 and YCbCr411\_8\_CbYYCrYY.

UVC drivers see it with the *FourCC* Y411.

The *Device Driver for The Imaging Source USB 33U, 37U and 38U Cameras* offers this pixel format as the Y411 video format.

## 5.1.1.6 RGB24

The camera converts the raw pixel data from the sensor to RGB24. Since RGB24 uses 3 bytes to store 1 pixel, the RGB24 pixel format requires three times the bandwidth of the 8-bit raw format, thus reducing the maximum possible frame rate.

*USB3 Vision* drivers enumerate this pixel format as BGR8.

UVC drivers see it with the *FourCC* `RGB24`.

The *Device Driver for The Imaging Source USB 33U, 37U and 38U Cameras* enumerates this pixel format as the `RGB24` video format.

## 5.1.1.7 8-Bit Monochrome

The camera generates the pixel data by debayering the raw pixel data and transmitting only the luminance information.

*USB3 Vision* drivers enumerate this pixel format as `Mono8`.

UVC drivers do not have access to this format.

## 5.1.2 Resolution

The DFK 38UX540 allows the user to specify which rectangular region of the image sensor to read out during camera operation. The size of this rectangle determines the number of pixels that have to be transferred for each frame and has a significant influence on the required USB bandwidth.

Lowering the resolution also often allows the image sensor to operate at a higher frame rate. Changes in the vertical resolution have more effect on the maximum frame rate than changes in the horizontal direction.

The way the resolution is controlled varies greatly between the driver technology used to access the camera:

- When using *USB3 Vision*, the resolution is controlled through the GenICam features Width and Height.
- When using the `uvccvideo` on Linux, the resolution is selected from a list of fixed formats. Dynamic frame sizes are not available.
- When using *IC Imaging Control*, the resolution is part of the video format, a parameter that combines pixel format, resolution and readout mode. For more information, refer to the *IC Imaging Control* documentation sections on `VideoFormat` and `VideoFormatDesc`.

| Parameter            | Horizontal Resolution |
|----------------------|-----------------------|
| Minimum              | 608                   |
| Maximum              | 5320                  |
| Increment            | 8                     |
| USB3 Vision: GenICam | Width                 |
| Type                 | Integer               |

| Parameter            | Vertical Resolution |
|----------------------|---------------------|
| Minimum              | 8                   |
| Maximum              | 4600                |
| Increment            | 8                   |
| USB3 Vision: GenICam | Height              |
| Type                 | Integer             |

## 5.1.3 Readout Modes

The DFK 38UX540 camera offers different sensor readout modes.

By default, the camera outputs all pixels of the image sensor.

In *skipping* modes, the image sensor regularly skips a number of rows and/or columns during readout. The resulting output image is smaller but contains the same field of view than the image produced by default readout mode.

The way the readout modes are controlled depends greatly upon which driver technology is used to access the camera:

- When using *USB3 Vision*, the readout mode is controlled through the *GenICam* features `DecimationHorizontal`, `DecimationVertical`, `BinningHorizontal` and `BinningVertical`.
- When using *IC Imaging Control*, the readout mode is part of the video format - a parameter that which combines pixel format, resolution and readout mode. For more information, refer to the *IC Imaging Control* documentation sections on `VideoFormat` and `VideoFormatDesc`.

The following readout modes are supported:

- Default
- Skipping 2X

| Parameter            | Skipping Horizontal               |
|----------------------|-----------------------------------|
| Valid Values         | 1, 2                              |
| USB3 Vision: GenICam | <code>DecimationHorizontal</code> |
| Type                 | Integer                           |

| Parameter            | Skipping Vertical               |
|----------------------|---------------------------------|
| Valid Values         | 1, 2                            |
| USB3 Vision: GenICam | <code>DecimationVertical</code> |
| Type                 | Integer                         |

## 5.1.4 Frame Rate

The frame rate is specified in frames per second and determines the camera's operating speed.

The way the frame rate is controlled depends greatly upon which driver technology is used to access the camera:

- When using *USB3 Vision*, the frame rate is controlled through the *GenICam* feature `AcquisitionFrameRate`.
- When using `uvcvideo` on Linux, the frame rate is selected from a list of available frame rates.
- When using IC Imaging Control, the frame rate is selected from a list of available frame rates through APIs such as `Grabber::setFPS` or `ICImagingControl.DeviceFrameRate`.

The range of available frame rates depends upon other camera settings such as well, pixel format, resolution and readout modes.

| Parameter            | Frame Rate                                              |
|----------------------|---------------------------------------------------------|
| Minimum              | Depending on Pixel Format, Resolution, and Readout Mode |
| Maximum              | Depending on Pixel Format, Resolution, and Readout Mode |
| USB3 Vision: GenICam | <code>AcquisitionFrameRate</code>                       |
| Type                 | Float                                                   |

**Please note:** Enabling [Device Link Throughput Limit Mode](#) can limit the frame rate below the configured value.

The following tables show the maximum frame rate for some combinations of pixel format and resolution.

### 8-Bit Bayer Raw

| Width | Height | Maximum Frame Rate |
|-------|--------|--------------------|
| 5320  | 4600   | 15                 |
| 3840  | 2160   | 34                 |
| 2656  | 2296   | 32                 |
| 1920  | 1080   | 66                 |

### 12-Bit Packed Bayer Raw

| Width | Height | Maximum Frame Rate |
|-------|--------|--------------------|
| 5320  | 4600   | 10                 |
| 3840  | 2160   | 29                 |
| 2656  | 2296   | 27                 |
| 1920  | 1080   | 66                 |

## 16-Bit Bayer Raw

| Width | Height | Maximum Frame Rate |
|-------|--------|--------------------|
| 5320  | 4600   | 7                  |
| 3840  | 2160   | 22                 |
| 2656  | 2296   | 27                 |
| 1920  | 1080   | 55                 |

## YUV 4:2:2

| Width | Height | Maximum Frame Rate |
|-------|--------|--------------------|
| 5320  | 4600   | 7                  |
| 3840  | 2160   | 22                 |
| 2656  | 2296   | 30                 |
| 1920  | 1080   | 66                 |

## YUV 4:1:1 (a)

| Width | Height | Maximum Frame Rate |
|-------|--------|--------------------|
| 5320  | 4600   | 10                 |
| 3840  | 2160   | 30                 |
| 2656  | 2296   | 32                 |
| 1920  | 1080   | 66                 |

## YUV 4:1:1 (b)



| Width | Height | Maximum Frame Rate |
|-------|--------|--------------------|
| 5320  | 4600   | 10                 |
| 3840  | 2160   | 30                 |
| 2656  | 2296   | 27                 |
| 1920  | 1080   | 66                 |

## RGB24

| Width | Height | Maximum Frame Rate |
|-------|--------|--------------------|
| 5320  | 4600   | 5                  |
| 3840  | 2160   | 15                 |
| 2656  | 2296   | 20                 |
| 1920  | 1080   | 57                 |

## 8-Bit Monochrome

| Width | Height | Maximum Frame Rate |
|-------|--------|--------------------|
| 5320  | 4600   | 15                 |
| 3840  | 2160   | 34                 |
| 2656  | 2296   | 32                 |
| 1920  | 1080   | 66                 |

### 5.1.5 Partial Scan Offset

If the selected resolution is smaller than the sensor size, the part of the sensor that is actually read out can be specified by the *Partial Scan Offset X* and *Partial Scan Offset Y* parameters. By default, the camera automatically positions the offsets so that the center of the sensor is used.

| Parameter            | Partial Scan Offset X                                     |
|----------------------|-----------------------------------------------------------|
| Minimum              | 0                                                         |
| Maximum              | 4712                                                      |
| Increment            | 8                                                         |
| USB3 Vision: GenICam | OffsetX                                                   |
| Type                 | Integer                                                   |
| Video4Linux2         | ROI Offset X                                              |
| VCD Property         | VCDID_PartialScanOffset<br>\VCDElement_PartialScanOffsetX |

| Parameter            | Partial Scan Offset Y                                     |
|----------------------|-----------------------------------------------------------|
| Minimum              | 0                                                         |
| Maximum              | 4592                                                      |
| Increment            | 8                                                         |
| USB3 Vision: GenICam | OffsetY                                                   |
| Type                 | Integer                                                   |
| Video4Linux2         | ROI Offset Y                                              |
| VCD Property         | VCDID_PartialScanOffset<br>\VCDElement_PartialScanOffsetY |

If *Partial Scan Offset X* or *Partial Scan Offset Y* is configured to a value that would be invalid with the current setting of [Resolution](#) setting, the camera uses the maximum possible value.

| Parameter            | Partial Scan Auto Center                                                                          |
|----------------------|---------------------------------------------------------------------------------------------------|
| On                   | Automatically configure Partial Scan Offset X/Y so that the center area of the sensor is read out |
| True                 |                                                                                                   |
| Off                  | Control Partial Scan Offset X/Y manually                                                          |
| False                |                                                                                                   |
| USB3 Vision: GenICam | OffsetAutoCenter                                                                                  |
| Type                 | Boolean                                                                                           |
| Video4Linux2         | ROI Auto Center                                                                                   |
| VCD Property         | VCDID_PartialScanOffset<br>\VCDElement_PartialScanAutoCenter                                      |



## 5.1.6 Image Flipping

The DFK 38UX540 camera allows flipping of the image data horizontally, vertically, or both. The *Flip Horizontal* and *Flip Vertical* parameters can be used to control this sensor feature.

| Parameter            | Flip Horizontal                        |
|----------------------|----------------------------------------|
| True                 | Image data is flipped horizontally     |
| False                | Image data is not flipped horizontally |
| USB3 Vision: GenICam | ReverseX                               |
| Type                 | Boolean                                |
| Video4Linux2         | Flip Horizontal                        |
| VCD Property         | VCDID_FlipHorizontal\VCDElement_Value  |

| Parameter            | Flip Vertical                        |
|----------------------|--------------------------------------|
| True                 | Image data is flipped vertically     |
| False                | Image data is not flipped vertically |
| USB3 Vision: GenICam | ReverseY                             |
| Type                 | Boolean                              |
| Video4Linux2         | Flip Vertical                        |
| VCD Property         | VCDID_FlipVertical\VCDElement_Value  |

## 5.2 Image Sensor Control

### 5.2.1 Exposure Time

The *Exposure Time* parameter defines the time the camera opens its (electronic) shutter when it is taking an image.

| Parameter            | Exposure Time                   |
|----------------------|---------------------------------|
| Minimum              | 1 $\mu$ s                       |
| Maximum              | 4 s                             |
| Default              | auto                            |
| USB3 Vision: GenICam | ExposureTime                    |
| Type                 | Float                           |
| Video4Linux2         | Exposure Time (us)              |
| VCD Property         | VCDID_Exposure\VCDElement_Value |

## 5.2.2 Gain

The *Gain* parameter defines the amplification that is applied to the image at sensor level.

| Parameter            | Gain                        |
|----------------------|-----------------------------|
| Minimum              | 0 dB                        |
| Maximum              | 48 dB                       |
| Default              | auto                        |
| USB3 Vision: GenICam | Gain                        |
| Type                 | Float                       |
| Video4Linux2         | Gain (db/100)               |
| VCD Property         | VCDID_Gain\VCDElement_Value |

## 5.2.3 Black Level

The *Black Level* parameter defines the lowest possibly intensity value of the image sensor.

| Parameter            | Black Level                       |
|----------------------|-----------------------------------|
| Minimum              | 0                                 |
| Maximum              | 4095                              |
| Default              | 240                               |
| USB3 Vision: GenICam | BlackLevel                        |
| Type                 | Float                             |
| Video4Linux2         | Brightness                        |
| VCD Property         | VCDID_Brightness\VCDElement_Value |

## 5.3 Automatic Exposure and Gain Control

The DFK 38UX540 camera can automatically control gain and exposure time. These automatic functions are enabled by default.

In order to optimize image parameters, a region of interest can be specified for automatic functions. Specifying a region of interest enables fine-grained control over the image area for which the image parameters are optimized. A selection of pre-defined area presets is available, but the user can also specify the coordinates of a custom rectangle.

In certain situations, it is desirable to limit the range of the auto-controlled parameters. For example, one might want to avoid high gain settings in order to keep noise levels low. Other applications require limiting the maximum exposure time so that movements do not get blurred. Therefore, the ranges of the gain and exposure parameter can be limited.

If both auto exposure and auto gain are active, the camera tries to lower the gain value in order to reduce noise and improve the image quality.

## 5.3.1 Auto Exposure

| Parameter            | Auto Exposure                  |
|----------------------|--------------------------------|
| Continuous           | Enable Auto Exposure           |
| True                 |                                |
| Off                  | Disable Auto Exposure          |
| False                |                                |
| USB3 Vision: GenICam | ExposureAuto                   |
| Type                 | Enumeration                    |
| Video4Linux2         | Auto Shutter                   |
| VCD Property         | VCDID_Exposure\VCDElement_Auto |

## 5.3.2 Auto Gain

| Parameter            | Auto Gain                  |
|----------------------|----------------------------|
| Continuous           | Enable Auto Gain           |
| True                 |                            |
| Off                  | Disable Auto Gain          |
| False                |                            |
| USB3 Vision: GenICam | GainAuto                   |
| Type                 | Enumeration                |
| Video4Linux2         | Auto Gain                  |
| VCD Property         | VCDID_Gain\VCDElement_Auto |

## 5.3.3 Auto Reference Value

The *Auto Reference Value* parameter specifies the target brightness for both auto exposure and auto gain.

| Parameter            | Auto Reference Value                    |
|----------------------|-----------------------------------------|
| Minimum              | 0                                       |
| Maximum              | 255                                     |
| Default              | 128                                     |
| USB3 Vision: GenICam | ExposureAutoReference                   |
| Type                 | Integer                                 |
| Video4Linux2         | ExposureAutoReference                   |
| VCD Property         | VCDID_Exposure\VCDElement_AutoReference |

## 5.3.4 Highlight Reduction

Enabling *Highlight Reduction* lets the auto exposure and auto gain functions reduce overexposed areas in the output image. This feature is particularly useful when using 10/12/16-bit output images and a tone mapping algorithm in post-processing when using higher bit depths as the dark areas still contain a lot of useful information.

| Parameter            | Highlight Reduction                                                                                                        |
|----------------------|----------------------------------------------------------------------------------------------------------------------------|
| True                 | Try to reduce overexposed areas                                                                                            |
| False                | Ignore overexposed areas and focus on matching the image brightness to the selected <a href="#">Auto Reference Value</a> . |
| USB3 Vision: GenICam | ExposureAutoHighlightReduction                                                                                             |
| Type                 | Boolean                                                                                                                    |
| Video4Linux2         | Highlight Reduction                                                                                                        |
| VCD Property         | VCDID_HighlightReduction\VCDElement_Value                                                                                  |

## 5.3.5 Auto Exposure Limits

The *Auto Exposure Lower Limit* parameter determines the minimum possible value that can be set by the auto exposure algorithm.

| Parameter            | Auto Exposure Lower Limit |
|----------------------|---------------------------|
| Minimum              | 1 $\mu$ s                 |
| Maximum              | 1 s                       |
| USB3 Vision: GenICam | ExposureAutoLowerLimit    |
| Type                 | Float                     |
| Video4Linux2         | Exposure Auto Lower Limit |

The *Auto Exposure Upper Limit* parameter determines the maximum possible value that can be set by the auto exposure algorithm.

| Parameter            | Auto Exposure Upper Limit              |
|----------------------|----------------------------------------|
| Minimum              | 1 $\mu$ s                              |
| Maximum              | 1 s                                    |
| USB3 Vision: GenICam | ExposureAutoUpperLimit                 |
| Type                 | Float                                  |
| Video4Linux2         | Exposure Auto Upper Limit              |
| VCD Property         | VCDID_Exposure\VCDElement_AutoMaxValue |

If the *Auto Exposure Upper Limit Auto* parameter is enabled, the value of *Auto Exposure Upper Limit* is automatically kept at the maximum possible value for the current frame rate.

| Parameter            | Auto Exposure Upper Limit Auto                        |
|----------------------|-------------------------------------------------------|
| On                   | Select <i>Auto Exposure Upper Limit</i> automatically |
| Off                  | Let the user control <i>Auto Exposure Upper Limit</i> |
| USB3 Vision: GenICam | ExposureAutoUpperLimitAuto                            |
| Type                 | Enumeration                                           |
| Video4Linux2         | Exposure Auto Upper Limit Auto                        |
| VCD Property         | VCDID_Exposure\VCDElement_AutoMaxValueAuto            |

## 5.3.6 Auto Gain Limits

The *Auto Gain Lower Limit* parameter determines the minimum possible value that can be set by the auto gain algorithm.

| Parameter            | Auto Gain Lower Limit |
|----------------------|-----------------------|
| Minimum              | 0 dB                  |
| Maximum              | 48 dB                 |
| USB3 Vision: GenICam | GainAutoLowerLimit    |
| Type                 | Float                 |
| Video4Linux2         | Gain Auto Lower Limit |

The *Auto Gain Upper Limit* parameter determines the maximum possible value that can be set by the auto gain algorithm.

| Parameter            | Auto Gain Upper Limit |
|----------------------|-----------------------|
| Minimum              | 0 dB                  |
| Maximum              | 48 dB                 |
| USB3 Vision: GenICam | GainAutoUpperLimit    |
| Type                 | Float                 |
| Video4Linux2         | Gain Auto Upper Limit |

## 5.4 Trigger

The trigger mode can be used to take images at very specific points in time which are specified by an electrical signal connected to the [TRIGGER\\_IN](#) pin of the I/O connector of the camera.

### 5.4.1 Trigger Mode

The *Trigger Mode* parameter enables the trigger mode.

| Parameter            | Trigger Mode                   |
|----------------------|--------------------------------|
| On                   | Enable Trigger Mode            |
| True                 |                                |
| Off                  | Disable Trigger Mode           |
| False                |                                |
| USB3 Vision: GenICam | TriggerMode                    |
| Type                 | Enumeration                    |
| Video4Linux2         | Trigger Mode                   |
| VCD Property         | VCDID_Trigger\VCDElement_Value |

### 5.4.2 Trigger Polarity

The *Trigger Polarity* parameter controls whether a trigger event is accepted on the rising or falling edge of the signal connected to the TRIGGER\_IN line.



| Parameter            | Trigger Polarity                      |
|----------------------|---------------------------------------|
| RisingEdge           | Accept rising edge as trigger signal  |
| True                 |                                       |
| FallingEdge          | Accept falling edge as trigger signal |
| False                |                                       |
| USB3 Vision: GenICam | TriggerActivation                     |
| Type                 | Enumeration                           |
| Video4Linux2         | Trigger Polarity                      |
| VCD Property         | VCDID_Trigger\VCDElement_Polarity     |

## 5.4.3 Software Trigger

The *Software Trigger* function can be used to simulate a trigger pulse, in turn causing one image to be exposed and delivered to the host computer.

| Parameter            | Software Trigger                         |
|----------------------|------------------------------------------|
| Execute              | Simulate one trigger pulse               |
| USB3 Vision: GenICam | TriggerSoftware                          |
| Type                 | Command                                  |
| Video4Linux2         | Software Trigger                         |
| VCD Property         | VCDID_Trigger\VCDElement_SoftwareTrigger |

## 5.4.4 Trigger Exposure Mode

The *Trigger Exposure Mode* parameter sets the way in which the exposure time is controlled in trigger mode. By default, the exposure time is controlled through the [Exposure Time](#) parameter. The exposure time can also be controlled by the time the TRIGGER\_IN line is kept in active state.

| Parameter            | Trigger Exposure Mode                                                          |
|----------------------|--------------------------------------------------------------------------------|
| FrameStart           | The exposure time is controlled by the <a href="#">Exposure Time</a> parameter |
| Timed                |                                                                                |
| ExposureActive       | The exposure time is controlled by the pulse length on the TRIGGER_IN pin      |
| Trigger Width        |                                                                                |
| USB3 Vision: GenICam | TriggerSelector                                                                |
| Type                 | Enumeration                                                                    |
| Video4Linux2         | Trigger Exposure Mode                                                          |
| VCD Property         | VCDID_Trigger\VCDElement_TriggerExposureMode                                   |

## 5.4.5 Trigger Burst Count

The *Trigger Burst Count* parameter allows the camera to be configured to take more than one image per trigger pulse. By default, this parameter is set to 1 so that exactly one image is acquired. The images are taken as rapidly as possible given current settings (i.e. as limited by the current exposure time and frame rate settings).

| Parameter            | Trigger Burst Count                        |
|----------------------|--------------------------------------------|
| Minimum              | 1                                          |
| Maximum              | 65535                                      |
| Default              | 1                                          |
| USB3 Vision: GenICam | AcquisitionBurstFrameCount                 |
| Type                 | Integer                                    |
| Video4Linux2         | Trigger Burst Count                        |
| VCD Property         | VCDID_Trigger\VCDElement_TriggerBurstCount |

## 5.4.6 Trigger Source

The *Trigger Source* parameter allows the camera to be configured to only accept trigger signals from a specified source, e.g. only software trigger.

| Parameter            | Trigger Source                        |
|----------------------|---------------------------------------|
| Any                  | Allow trigger signals from any source |
| Line1                | Allow only hardware trigger           |
| Software             | Allow only software trigger           |
| USB3 Vision: GenICam | TriggerSource                         |
| Type                 | Enumeration                           |

## 5.4.7 IMX Low-Latency Mode

The *IMX Low-Latency Mode* parameter controls whether the sensor operates in low-latency trigger mode.

| Parameter            | IMX Low-Latency Mode                                                                                                                                                                                                               |
|----------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| True                 | Delay between trigger input and start of exposure is exactly as configured through the <i>Trigger Delay</i> feature                                                                                                                |
| False                | Delay between trigger input and start of exposure is the time configured by the <i>Trigger Delay</i> feature in addition to a random delay depending on resolution, frame rate, and timing relative to the sensor's internal state |
| USB3 Vision: GenICam | IMXLowLatencyTriggerMode                                                                                                                                                                                                           |
| Type                 | Boolean                                                                                                                                                                                                                            |
| VCD Property         | VCDID_Trigger\VCDElement_IMXLowLatencyMode                                                                                                                                                                                         |

**Important:** If *IMX Low-Latency Mode* is enabled, *Trigger Overlap* is not allowed and is thereby forced to `Off`.

## 5.4.8 Trigger Overlap

The *Trigger Overlap* feature gives information on when a new trigger pulse is accepted in the trigger -> exposure -> readout sequence.

| Parameter            | Trigger Overlap                                                                                                           |
|----------------------|---------------------------------------------------------------------------------------------------------------------------|
| Off                  | The next trigger pulse is only accepted once the previous frame has been read out from the sensor                         |
| Readout              | The next trigger pulse is accepted during readout as long as the remaining readout time is shorter than the exposure time |
| USB3 Vision: GenICam | TriggerOverlap                                                                                                            |
| Type                 | Enumeration                                                                                                               |
| VCD Property         | VCDID_Trigger\VCDElement_TriggerOverlap                                                                                   |

## 5.4.9 Trigger Delay

The *Trigger Delay* parameter specifies a time for which the camera waits between receiving a trigger signal and starting the exposure of an image. Simulated trigger pulses generated through the *Software Trigger* function are not delayed by this parameter.

| Parameter            | Trigger Delay                         |
|----------------------|---------------------------------------|
| Minimum              | 0 s                                   |
| Maximum              | 1 s                                   |
| USB3 Vision: GenICam | TriggerDelay                          |
| Type                 | Float                                 |
| Video4Linux2         | Trigger Delay                         |
| VCD Property         | VCDID_Trigger\VCDElement_TriggerDelay |

## 5.5 Trigger Timing Parameters

The 38U series camera series offers several options for dealing with bad trigger signals. By using the *Debounce Time*, *Denoise Time* and *Mask Time* parameters, the camera can be configured to ignore pulses on its [TRIGGER IN](#) line under certain conditions.

Useful values for these parameters are application-specific. They depend on the expected trigger frequency, the exposure time and assumptions about the input signal quality.

The default values for all these parameters is 0  $\mu$ s, assuming perfect signal quality.

### 5.5.1 Trigger Debounce Time

The *Trigger Debounce Time* parameter specifies the time for which the trigger input has to be low in order for the next trigger signal to be accepted.

| Parameter            | Trigger Debounce Time                    |
|----------------------|------------------------------------------|
| Minimum              | 0 s                                      |
| Maximum              | 1 s                                      |
| Default              | 0 s                                      |
| USB3 Vision: GenICam | TriggerDebounce                          |
| Type                 | Float                                    |
| Video4Linux2         | Trigger Debounce Time (us)               |
| VCD Property         | VCDID_Trigger\VCDElement_TriggerDebounce |

## 5.5.2 Trigger Mask Time

The *Trigger Mask Time* parameter specifies the time for which trigger pulses are ignored after accepting a trigger signal.

| Parameter            | Trigger Mask Time                    |
|----------------------|--------------------------------------|
| Minimum              | 0 s                                  |
| Maximum              | 1 s                                  |
| Default              | 0 s                                  |
| USB3 Vision: GenICam | TriggerMask                          |
| Type                 | Float                                |
| Video4Linux2         | Trigger Mask Time (us)               |
| VCD Property         | VCDID_Trigger\VCDElement_TriggerMask |

## 5.5.3 Trigger Noise Suppression Time

The *Trigger Noise Suppression Time* parameter specifies the time for which trigger input has to be active in order to be accepted as a trigger signal.

| Parameter            | Trigger Noise Suppression Time          |
|----------------------|-----------------------------------------|
| Minimum              | 0 s                                     |
| Maximum              | 1 s                                     |
| Default              | 0 s                                     |
| USB3 Vision: GenICam | TriggerDenoise                          |
| Type                 | Float                                   |
| Video4Linux2         | Trigger Noise Suppression Time          |
| VCD Property         | VCDID_Trigger\VCDElement_TriggerDenoise |

## 5.6 Digital I/O

The 38U series has one digital input and one digital output. The digital input can be used as a [Trigger](#) input but the current status can also be examined directly.

The digital output can be configured as a [Strobe](#) output to signal the exact moment when the image sensor is sensitive to light so that external light sources can be synchronized to its operation cycle.

### 5.6.1 General Purpose Input

The *General Purpose Input* parameter allows the current status of the [TRIGGER\\_IN](#) pin.

| Parameter            | General Purpose Input                                          |
|----------------------|----------------------------------------------------------------|
| True                 | TRIGGER_IN line status is low                                  |
| 1                    |                                                                |
| False                | TRIGGER_IN line status is high                                 |
| 0                    |                                                                |
| USB3 Vision: GenICam | GPIIn                                                          |
| Type                 | Boolean                                                        |
| Video4Linux2         | GPIN                                                           |
| VCD Property         | VCDID_GPIO\VCDElement_GPIORead<br>VCDID_GPIO\VCDElement_GPIOIn |

### 5.6.2 General Purpose Output

The *General Purpose Output* parameter controls the status of the [STROBE\\_OUT](#) pin.

| Parameter            | General Purpose Output                                           |
|----------------------|------------------------------------------------------------------|
| True                 | Drive the STROBE_OUT line high                                   |
| 1                    |                                                                  |
| False                | Drive the STROBE_OUT line low                                    |
| 0                    |                                                                  |
| USB3 Vision: GenICam | GPOut                                                            |
| Type                 | Boolean                                                          |
| Video4Linux2         | GPOUT                                                            |
| VCD Property         | VCDID_GPIO\VCDElement_GPIOWrite<br>VCDID_GPIO\VCDElement_GPIOOut |

## 5.7 Strobe

The strobe function controls the automatic generation of output pulses on the [STROBE\\_OUT](#) pin which is synchronized to the image sensor's exposure time.

### 5.7.1 Strobe Enable

The *Strobe Enable* parameter enables the automatic generation of strobe pulses.

| Parameter            | Strobe Enable                 |
|----------------------|-------------------------------|
| On                   | Strobe enabled                |
| True                 |                               |
| Off                  | Strobe disabled               |
| False                |                               |
| USB3 Vision: GenICam | StrobeEnable                  |
| Type                 | Enumeration                   |
| Video4Linux2         | Strobe Enable                 |
| VCD Property         | VCDID_Strobe\VCDElement_Value |

### 5.7.2 Strobe Polarity

The *Strobe Polarity* parameter can be used to invert the strobe pulse output.

| Parameter            | Strobe Polarity                                               |
|----------------------|---------------------------------------------------------------|
| ActiveHigh           | The STROBE_OUT pin is logically high during the exposure time |
| True                 |                                                               |
| ActiveLow            | The STROBE_OUT pin is logically low during the exposure time  |
| False                |                                                               |
| USB3 Vision: GenICam | StrobePolarity                                                |
| Type                 | Enumeration                                                   |
| Video4Linux2         | Strobe Polarity                                               |
| VCD Property         | VCDID_Strobe\VCDElement_StrobePolarity                        |

### 5.7.3 Strobe Operation

The *Strobe Operation* parameter specifies how the length of the strobe pulses are controlled.

| Parameter            | Strobe Operation                                             |
|----------------------|--------------------------------------------------------------|
| Exposure             | Output pulse duration is equal to the current exposure time  |
| True                 |                                                              |
| FixedDuration        | Output pulse duration is specified by <i>Strobe Duration</i> |
| False                |                                                              |
| USB3 Vision: GenICam | StrobeOperation                                              |
| Type                 | Enumeration                                                  |
| Video4Linux2         | Strobe Exposure                                              |
| VCD Property         | VCDID_Strobe\VCDElement_StrobeMode                           |

## 5.7.4 Strobe Duration

The *Strobe Duration* parameter controls the length of the strobe pulses if *Strobe Operation* is set to use the fixed duration mode.

| Parameter            | Strobe Duration                        |
|----------------------|----------------------------------------|
| Minimum              | 0 $\mu$ s                              |
| Maximum              | 32767 $\mu$ s                          |
| USB3 Vision: GenICam | StrobeDuration                         |
| Type                 | Integer                                |
| Video4Linux2         | Strobe Duration                        |
| VCD Property         | VCDID_Strobe\VCDElement_StrobeDuration |

## 5.7.5 Strobe Delay

The *Strobe Delay* parameter can be used to add a small delay between the start of exposure and the strobe output pulse.

| Parameter            | Strobe Delay                        |
|----------------------|-------------------------------------|
| Minimum              | 0 $\mu$ s                           |
| Maximum              | 32767 $\mu$ s                       |
| USB3 Vision: GenICam | StrobeDelay                         |
| Type                 | Integer                             |
| Video4Linux2         | Strobe Delay                        |
| VCD Property         | VCDID_Strobe\VCDElement_StrobeDelay |



## 5.8 White Balance

The DFK 38UX540 color camera can perform white balance by digital multiplication of the appropriate raw pixel values.

### 5.8.1 Auto White Balance

DFK 38UX540 can perform *Auto White Balance*. It can be enabled continuously when changes in lighting conditions are expected. Under controlled lighting conditions, however, one-time white balance calibration is the recommended approach.

To perform one-time white balance calibration, place a reference white sheet in front of the camera and set `BalanceWhiteAuto` to *Once*. The camera will then find the correct white balance settings for the current light conditions and keep them active until instructed otherwise.

| Parameter            | Auto White Balance                                                              |
|----------------------|---------------------------------------------------------------------------------|
| Continuous           | Enable automatic white balance                                                  |
| True                 |                                                                                 |
| Once                 | Enable automatic white balance until the color channels have been balanced once |
| One Push             |                                                                                 |
| Off                  | Disable automatic white balance                                                 |
| False                |                                                                                 |
| USB3 Vision: GenICam | BalanceWhiteAuto                                                                |
| Type                 | Enumeration                                                                     |
| Video4Linux2         | White Balance Component, Auto                                                   |
| VCD Property         | VCDID_WhiteBalance\VCDElement_Auto<br>VCDID_WhiteBalance\VCDElement_OnePush     |

### 5.8.2 White Balance Mode

The default auto white balance algorithm is *Gray World*. It is selected by setting the *White Balance Mode* accordingly. The *Gray World* algorithm operates under the assumption that the average color of a scene is near gray and adjusts the white balance coefficients so the average color of the resulting image is gray as well. In the case where this assumption is wrong (e.g. the camera is pointing at a blue carpet), the auto white balance algorithm will select coefficients that do not result in a visually accurate image.

To avoid the problems posed by the *Gray World* algorithm, the *Temperature* mode can be used. This mode operates by trying to determine the color temperature of the light source.

| Parameter            | White Balance Mode                                 |
|----------------------|----------------------------------------------------|
| Gray World           | Use the <i>Gray World</i> model                    |
| Temperature          | Use the <i>Temperature</i> model                   |
| USB3 Vision: GenICam | BalanceWhiteMode                                   |
| Type                 | Enumeration                                        |
| Video4Linux2         | Whitebalance Mode                                  |
| VCD Property         | VCDID_WhiteBalance<br>\VCDElement_WhiteBalanceMode |

To assist the automatic white balance temperature detection, *White Balance Auto Preset* can be used to limit the range of valid color temperatures.

| Parameter            | White Balance Auto Preset                                |
|----------------------|----------------------------------------------------------|
| Any                  | Allow any color temperature                              |
| Auto Warm White      | Limit color temperature to approximately 2500-4000 K     |
| Auto Cool White      | Limit color temperature to approximately 4000-5800 K     |
| Auto Daylight        | Limit color temperature to approximately 5700-7500 K     |
| Auto Deep Shade      | Limit color temperature to approximately 7500-10000 K    |
| USB3 Vision: GenICam | BalanceWhiteAutoPreset                                   |
| Type                 | Enumeration                                              |
| Video4Linux2         | Whitebalance Auto Preset                                 |
| VCD Property         | VCDID_WhiteBalance<br>\VCDElement_WhiteBalanceAutoPreset |

## 5.8.3 Manual White Balance

If *Auto White Balance* is not enabled, the amplifiers for the red, green and blue channels can be controlled manually.



| Parameter            | White Balance Red                                 |
|----------------------|---------------------------------------------------|
| Minimum              | 0                                                 |
| Maximum              | 3.984375                                          |
| Default              | auto                                              |
| USB3 Vision: GenICam | BalanceRatio[BalanceRatioSelector=Red]            |
| Type                 | Float                                             |
| Video4Linux2         | White Balance Red Component                       |
| VCD Property         | VCDID_WhiteBalance<br>\VCDElement_WhiteBalanceRed |

| Parameter            | White Balance Green                                 |
|----------------------|-----------------------------------------------------|
| Minimum              | 0                                                   |
| Maximum              | 3.984375                                            |
| Default              | auto                                                |
| USB3 Vision: GenICam | BalanceRatio[BalanceRatioSelector=Green]            |
| Type                 | Float                                               |
| Video4Linux2         | White Balance Green Component                       |
| VCD Property         | VCDID_WhiteBalance<br>\VCDElement_WhiteBalanceGreen |

| Parameter            | White Balance Blue                                 |
|----------------------|----------------------------------------------------|
| Minimum              | 0                                                  |
| Maximum              | 3.984375                                           |
| Default              | auto                                               |
| USB3 Vision: GenICam | BalanceRatio[BalanceRatioSelector=Blue]            |
| Video4Linux2         | White Balance Blue Component                       |
| VCD Property         | VCDID_WhiteBalance<br>\VCDElement_WhiteBalanceBlue |

If *White Balance Mode* is set to *Temperature*, the color temperature can be set directly. Additionally, a light source can be selected from a list of presets.

| Parameter            | White Balance Temperature                                 |
|----------------------|-----------------------------------------------------------|
| Minimum              | 2500 K                                                    |
| Maximum              | 10000 K                                                   |
| Default              | auto                                                      |
| Increment            | 100                                                       |
| USB3 Vision: GenICam | BalanceWhiteTemperature                                   |
| Type                 | Integer                                                   |
| Video4Linux2         | White Balance Temperature                                 |
| VCD Property         | VCDID_WhiteBalance<br>\VCDElement_WhiteBalanceTemperature |

| Parameter                       | White Balance Temperature Preset                    |
|---------------------------------|-----------------------------------------------------|
| Sodium-Vapor Lamp               | 2500 K                                              |
| Warm Light                      | 2700 K                                              |
| Halogen Light                   | 3000 K                                              |
| Neutral White                   | 3500 K                                              |
| Cool White<br>Fluorescent Light | 4000 K                                              |
| Cool White/Daylight<br>(CFL)    | 5000 K                                              |
| Daylight                        | 6000 K                                              |
| Cool White LED                  | 7500 K                                              |
| Blue Sky                        | 10000 K                                             |
| USB3 Vision: GenICam            | BalanceWhiteTemperaturePreset                       |
| Type                            | Enumeration                                         |
| Video4Linux2                    | Whitebalance Temperature Preset                     |
| VCD Property                    | VCDID_WhiteBalance<br>\VCDElement_TemperaturePreset |

## 5.9 Image Processing

### 5.9.1 Gamma

The 38U series cameras can perform gamma correction on the image data. If the pixel format of a color camera is set a YUV mode, gamma correction is applied to the Y channel. In bayer raw and RGB24 modes, all color channels are subject to the same gamma correction.

| Parameter            | Gamma                        |
|----------------------|------------------------------|
| Minimum              | 0.01                         |
| Maximum              | 5.0                          |
| Default              | 1.0                          |
| USB3 Vision: GenICam | Gamma                        |
| Type                 | Float                        |
| Video4Linux2         | Gamma                        |
| VCD Property         | VCDID_Gamma\VCDElement_Value |

## 5.9.2 Lookup Table

The 38U series allows the user to specify a lookup table (LUT) that can transform pixel values. This lookup table can be used to perform tasks like histogram equalization inside the camera.

If the pixel format of a color camera is set to one of the YUV modes, the lookup table is applied only to the Y channel. In bayer raw and RGB24 modes, all color channels are subject to the same lookup operation.

The lookup table has 257 16-bit entries. The upper 8 bits of the image data are used to select the appropriate entry in the lookup table, while the remaining bits are used to interpolate between the selected entry and one of its neighbors.

The *LUT Enable* feature enables the lookup table.

| Parameter            | LUT Enable                     |
|----------------------|--------------------------------|
| True                 | Enable lookup table operation  |
| False                | Disable lookup table operation |
| USB3 Vision: GenICam | LUTEnable                      |
| Type                 | Boolean                        |

The lookup table values can be programmed using the *LUT Index* and *LUT Value* features.

| Parameter            | LUT Index |
|----------------------|-----------|
| Minimum              | 0         |
| Maximum              | 256       |
| USB3 Vision: GenICam | LUTIndex  |
| Type                 | Integer   |

| Parameter            | LUT Value |
|----------------------|-----------|
| Minimum              | 0         |
| Maximum              | 65535     |
| USB3 Vision: GenICam | LUTValue  |
| Type                 | Integer   |

The whole lookup table can be quickly reprogrammed through the *LUT Value All* feature.

| Parameter            | LUT Value All                                                                                          |
|----------------------|--------------------------------------------------------------------------------------------------------|
| Value                | 1028 bytes of memory containing 257 LUT entries. Each 16-bit LUT entry is aligned on a 32-bit boundary |
| USB3 Vision: GenICam | LUTValueAll                                                                                            |
| Type                 | Register                                                                                               |

**Important:** Since gamma correction is implemented using the same hardware as the lookup table, gamma correction is disabled when the lookup table is enabled.

## 5.10 Color Processing

The DFK 38UX540 color camera allows color adjustments with the *Hue* and *Saturation* parameters. These adjustments work with all output pixel formats.

**Important:** When a bayer raw pixel format is selected, *Hue* and *Saturation* still work. However, when at least one of them is enabled (set to non-default value), the resulting image is slightly blurred because of the way these parameters are implemented internally.

### 5.10.1 Hue

The *Hue* parameter controls the color angle of the output image.

| Parameter            | Hue                        |
|----------------------|----------------------------|
| Minimum              | -180                       |
| Maximum              | 180                        |
| Default              | 0                          |
| USB3 Vision: GenICam | Hue                        |
| Type                 | Float                      |
| Video4Linux2         | Hue                        |
| VCD Property         | VCDID_Hue\VCDElement_Value |

## 5.10.2 Saturation

The *Saturation* parameter controls the color saturation of the output image.

| Parameter            | Saturation                        |
|----------------------|-----------------------------------|
| Minimum              | 0                                 |
| Maximum              | 255                               |
| Default              | 64                                |
| USB3 Vision: GenICam | Saturation                        |
| Type                 | Float                             |
| Video4Linux2         | Saturation                        |
| VCD Property         | VCDID_Saturation\VCDElement_Value |

## 5.11 Region of Interest for Auto Functions

The 38U series cameras allow for the setting of a region of interest that is used while controlling the [Auto Exposure](#), [Auto Gain](#) and [Auto White Balance](#) functions.

### 5.11.1 Auto Functions ROI Enable

The *Auto Functions ROI Enable* parameter allows for the use of a region of interest for auto functions.

| Parameter            | Auto Functions ROI Enable                                           |
|----------------------|---------------------------------------------------------------------|
| True                 | Auto functions only take a specified part of the image into account |
| False                | Auto functions look at the whole image                              |
| USB3 Vision: GenICam | AutoFunctionsROIEnable                                              |
| Type                 | Boolean                                                             |
| Video4Linux2         | Auto Functions ROI Enable                                           |
| VCD Property         | VCDID_AutoRoi\VCDElement_Value                                      |

## 5.11.2 Auto Functions ROI Preset

The *Auto Functions ROI Preset* parameter lets the user select from a list of ROI presets.

| Parameter            | Auto Functions ROI Preset                                         |
|----------------------|-------------------------------------------------------------------|
| Full Sensor          | Select the full output image                                      |
| Center 50%           | Select a rectangular area in the center of the output image       |
| Center 25%           | Select a small rectangular area in the center of the output image |
| Bottom Half          | Select the bottom half of the output image                        |
| Top Half             | Select the top half of the output image                           |
| Custom Rectangle     | Select a custom rectangle for fine-grained control                |
| USB3 Vision: GenICam | AutoFunctionsROI_Preset                                           |
| Type                 | Enumeration                                                       |
| Video4Linux2         | Auto Functions ROI Preset                                         |
| VCD Property         | VCDID_AutoRoi\VCDElement_AutoRoiPreset                            |

## 5.11.3 Auto Functions ROI Custom Rectangle

When *Auto Functions ROI Preset* is set to *Custom Rectangle*, the user can manually set the position and size of the region of interest. The coordinates are relative to the origin of the current video format as specified by [Partial Scan Offset](#).





| Parameter            | Auto Functions ROI Left                          |
|----------------------|--------------------------------------------------|
| Minimum              | 0                                                |
| Maximum              | 2576                                             |
| Increment            | 2                                                |
| USB3 Vision: GenICam | AutoFunctionsROILeft                             |
| Type                 | Integer                                          |
| Video4Linux2         | Auto Functions ROI Left                          |
| VCD Property         | VCDID_AutoRoi<br>\VCDElement_AutoRoiLeftRelative |

| Parameter            | Auto Functions ROI Top                          |
|----------------------|-------------------------------------------------|
| Minimum              | 0                                               |
| Maximum              | 2032                                            |
| Increment            | 2                                               |
| USB3 Vision: GenICam | AutoFunctionsROITop                             |
| Type                 | Integer                                         |
| Video4Linux2         | Auto Functions ROI Top                          |
| VCD Property         | VCDID_AutoRoi<br>\VCDElement_AutoRoiTopRelative |

| Parameter            | Auto Functions ROI Width                          |
|----------------------|---------------------------------------------------|
| Minimum              | 16                                                |
| Maximum              | 2592                                              |
| Increment            | 2                                                 |
| USB3 Vision: GenICam | AutoFunctionsROIWidth                             |
| Type                 | Integer                                           |
| Video4Linux2         | Auto Functions ROI Width                          |
| VCD Property         | VCDID_AutoRoi<br>\VCDElement_AutoRoiWidthRelative |



| Parameter            | Auto Functions ROI Height                          |
|----------------------|----------------------------------------------------|
| Minimum              | 16                                                 |
| Maximum              | 2048                                               |
| Increment            | 2                                                  |
| USB3 Vision: GenICam | AutoFunctionsROIHeight                             |
| Type                 | Integer                                            |
| Video4Linux2         | Auto Functions ROI Height                          |
| VCD Property         | VCDID_AutoRoi<br>\VCDElement_AutoRoiHeightRelative |

## 5.12 User Sets

The 38U series cameras can store their complete configuration into built-in non-volatile memory. The camera configuration can be saved into and restored from one of two available memory slots upon user's request. Additionally, the camera can be configured to load one of the user's camera configurations at startup.

### 5.12.1 User Set Selector

The *User Set Selector* parameter selects the memory slot on which consecutive load and save commands are executed.

| Parameter            | User Set Selector                                                                                               |
|----------------------|-----------------------------------------------------------------------------------------------------------------|
| UserSet1             | First of the two memory slots for user configurations                                                           |
| UserSet2             | Second of the two memory slots for user configurations                                                          |
| Default              | A special memory slot that always contains the camera's factory default configuration. It cannot be overwritten |
| USB3 Vision: GenICam | UserSetSelector                                                                                                 |
| Type                 | Enumeration                                                                                                     |

### 5.12.2 Load User Set

By using the *Load User Set* command, the user can restore the camera configuration from the memory slot selected by *User Set Selector*.

| Parameter            | Load User Set                                                                               |
|----------------------|---------------------------------------------------------------------------------------------|
| Execute              | Restore the camera configuration from the memory slot specified by <i>User Set Selector</i> |
| USB3 Vision: GenICam | UserSetLoad                                                                                 |
| Type                 | Command                                                                                     |

## 5.12.3 Save User Set

By using the *Save User Set* command, the user can save the camera configuration into the memory slot selected by *User Set Selector*.

| Parameter            | Save User Set                                                                                    |
|----------------------|--------------------------------------------------------------------------------------------------|
| Execute              | Save the current camera configuration into the memory slot specified by <i>User Set Selector</i> |
| USB3 Vision: GenICam | UserSetSave                                                                                      |
| Type                 | Command                                                                                          |

## 5.12.4 Default User Set

The *Default User Set* parameter controls the camera's startup behavior. It selects which memory slot is used for device initialization when the camera is powered up.

| Parameter            | Default User Set                               |
|----------------------|------------------------------------------------|
| UserSet1             | Load configuration from the first memory slot  |
| UserSet2             | Load configuration from the second memory slot |
| Default              | Load factory default configuration             |
| USB3 Vision: GenICam | UserSetDefault                                 |
| Type                 | Enumeration                                    |

## 5.13 Multi-Frame Output Mode

The 38U series cameras support cycling the exposure time through pre-programmed values from frame to frame in order to form a frame set. In post-processing, sets of frames captured with different exposure times can be used to create images with higher dynamic range than those from single exposure.

The camera can be configured to use 2 or 4 different exposure times.

If required, different gain values can be selected for use along with the configured exposure times.

### 5.13.1 Multi-Frame Output Mode Enable

The *Multi-Frame Output Mode Enable* parameter activates the multi-frame output mode.



| Parameter            | Multi-Frame Output Mode Enable                                                      |
|----------------------|-------------------------------------------------------------------------------------|
| True                 | Cycle through the exposure times specified by Multi-Frame Output Mode Exposure Time |
| False                | Use the exposure time defined by Exposure Time for all frames                       |
| USB3 Vision: GenICam | MultiFrameSetOutputModeEnable                                                       |
| Type                 | Boolean                                                                             |
| VCD Property         | VCDID_MultiFrameOutputMode<br>\VCDElement_Value                                     |

## 5.13.2 Multi-Frame Output Mode Frame Count

The *Multi-Frame Output Mode Frame Count* parameter defines the number of frames in a frame set.

| Parameter            | Multi-Frame Output Mode Frame Count                       |
|----------------------|-----------------------------------------------------------|
| 2 Frames             | Use two different exposure times                          |
| 4 Frames             | Use four different exposure times                         |
| USB3 Vision: GenICam | MultiFrameSetOutputModeFrameCount                         |
| Type                 | Enumeration                                               |
| VCD Property         | VCDID_MultiFrameOutputMode<br>\VCDElement_MultiFrameCount |

## 5.13.3 Multi-Frame Output Mode Exposure Time

The *Multi-Frame Output Mode Exposure Time* parameters control the different exposure times in a frame set.

| Parameter            | Multi-Frame Output Mode Exposure Time                                                                                                                                  |
|----------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Minimum              | 1 $\mu$ s                                                                                                                                                              |
| Maximum              | 4000000 $\mu$ s                                                                                                                                                        |
| USB3 Vision: GenICam | MultiFrameSetOutputModeExposureTime0<br>MultiFrameSetOutputModeExposureTime1<br>MultiFrameSetOutputModeExposureTime2<br>MultiFrameSetOutputModeExposureTime3           |
| Type                 | Float                                                                                                                                                                  |
| VCD Property         | VCDID_MultiFrameOutputMode<br>\VCDElement_MultiFrameExposure0<br>\VCDElement_MultiFrameExposure1<br>\VCDElement_MultiFrameExposure2<br>\VCDElement_MultiFrameExposure3 |

## 5.13.4 Multi-Frame Output Mode Custom Gain

The *Multi-Frame Output Mode Custom Gain* parameter allows specifying different gain values for each frame in a frame set.

| Parameter            | Multi-Frame Output Mode Custom Gain                                     |
|----------------------|-------------------------------------------------------------------------|
| True                 | Cycle through the gain values specified by Multi-Frame Output Mode Gain |
| False                | Use the gain value defined by Gain                                      |
| USB3 Vision: GenICam | MultiFrameSetOutputModeCustomGain                                       |
| Type                 | Boolean                                                                 |
| VCD Property         | VCDID_MultiFrameOutputMode<br>\VCDElement_MultiFrameCustomGainEnable    |

## 5.13.5 Multi-Frame Output Mode Gain

The *Multi-Frame Output Mode Gain* parameters controls the gain values used to capture the images of the frame set.

| Parameter            | Multi-Frame Output Mode Gain                                                                                                                           |
|----------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------|
| Minimum              | 0 dB                                                                                                                                                   |
| Maximum              | 48 dB                                                                                                                                                  |
| USB3 Vision: GenICam | MultiFrameSetOutputModeGain0<br>MultiFrameSetOutputModeGain1<br>MultiFrameSetOutputModeGain2<br>MultiFrameSetOutputModeGain3                           |
| Type                 | Float                                                                                                                                                  |
| VCD Property         | VCDID_MultiFrameOutputMode<br>\VCDElement_MultiFrameGain0<br>\VCDElement_MultiFrameGain1<br>\VCDElement_MultiFrameGain2<br>\VCDElement_MultiFrameGain3 |

## 5.14 Timestamp Control

38U series cameras run an internal timestamp clock. The clock starts at zero when the camera is powered up.

The source of the timestamp clock has a frequency tolerance of  $\pm 50$  ppm.

All image buffers sent by the camera have a timestamp attached to them.

Notification for asynchronous [Events](#) also contain a timestamp value.

### 5.14.1 Timestamp Latch

The *Timestamp Latch* command copies the current value of the camera's timestamp counter into the [Timestamp Latch Value](#) so that it can be read later.

| Parameter            | Timestamp Latch                                                                                 |
|----------------------|-------------------------------------------------------------------------------------------------|
| Execute              | Copies the current value of the camera's timestamp into <a href="#">Timestamp Latch Value</a> . |
| USB3 Vision: GenICam | TimestampLatch                                                                                  |
| Type                 | Command                                                                                         |

### 5.14.2 Timestamp Latch Value

The *Timestamp Latch Value* feature contains the value of camera's timestamp counter at the time of the previous execution of the [Timestamp Latch](#) command.

| Parameter            | Timestamp Latch Value |
|----------------------|-----------------------|
| USB3 Vision: GenICam | TimestampLatchValue   |
| Type                 | Integer               |
| Unit                 | $\mu$ s               |

## 5.14.3 Timestamp Reset

The *Timestamp Reset* command resets the camera's timestamp counter to start from zero.

| Parameter            | Timestamp Reset                        |
|----------------------|----------------------------------------|
| Execute              | Resets the camera's timestamp counter. |
| USB3 Vision: GenICam | TimestampReset                         |
| Type                 | Command                                |

## 5.15 Events

38U series devices can send asynchronous event packets, notifying the application about certain events during device operation.

To enable a specific event, select the event to enable in [Event Selector](#) and then set [Event Notification](#) to *On*.

The way to receive the event notifications depends on the used camera SDK. In most cases, a notification handler has to be registered on the feature named after the event, e.g. *EventTest* or *EventExposureEnd*. Additional event data can often be queried via additional features with a derived name, e.g. *EventTestTimestamp* or *EventExposureEndFrameID*.

### 5.15.1 Event Selector

The *Event Selector* parameter selects an event to configure.

| Parameter            | Event Selector                       |
|----------------------|--------------------------------------|
| ExposureEnd          | Selects the ExposureEnd event        |
| FrameTriggerMissed   | Selects the FrameTriggerMissed event |
| Line1FallingEdge     | Selects the Line1FallingEdge event   |
| Line1RisingEdge      | Selects the Line1RisingEdge event    |
| Test                 | Selects the Test event               |
| USB3 Vision: GenICam | EventSelector                        |
| Type                 | Enumeration                          |

## 5.15.2 Event Notification

The *Event Notification* parameter enables or disables the event selected by [Event Selector](#).

| Parameter            | Event Notification                            |
|----------------------|-----------------------------------------------|
| On                   | Enables notifications for the selected event  |
| Off                  | Disables notifications for the selected event |
| USB3 Vision: GenICam | EventNotification                             |
| Type                 | Enumeration                                   |

## 5.15.3 Event Exposure End

The *Event Exposure End* feature is notified when the camera completes the exposure of an image.

It can be useful to synchronize camera exposure with real-world events, e.g. moving parts in front of the camera.

The value of this feature has no meaning and should not be read.

| Parameter            | Event Exposure End |
|----------------------|--------------------|
| USB3 Vision: GenICam | EventExposureEnd   |
| Type                 | Integer            |

The *Event Exposure End Timestamp* parameter identifies the point in time when the current exposure end event occurred.

Please refer to the documentation of your camera SDK on how to safely read the timestamp associated with the current event when a notification is received.

| Parameter            | Event Exposure End Timestamp |
|----------------------|------------------------------|
| USB3 Vision: GenICam | EventExposureEndTimestamp    |
| Type                 | Integer                      |

The *Event Exposure End Frame ID* parameter the frame number of the frame whose exposure was completed.

Please refer to the documentation of your camera SDK on how to safely read the timestamp associated with the current event when a notification is received.

| Parameter            | Event Exposure End Frame ID |
|----------------------|-----------------------------|
| USB3 Vision: GenICam | EventExposureEndFrameID     |
| Type                 | Integer                     |



## 5.15.4 Event Frame Trigger Missed

The *Event Frame Trigger Missed* feature is notified when the camera receives a trigger pulse, but the sensor was not in a state where a new exposure could be started.

The value of this feature has no meaning and should not be read.

| Parameter            | Event Frame Trigger Missed |
|----------------------|----------------------------|
| USB3 Vision: GenICam | EventFrameTriggerMissed    |
| Type                 | Integer                    |

The *Event Frame Trigger Missed Timestamp* parameter identifies the point in time when the current frame trigger missed event occurred.

Please refer to the documentation of your camera SDK on how to safely read the timestamp associated with the current event when a notification is received.

| Parameter            | Event Frame Trigger Missed Timestamp |
|----------------------|--------------------------------------|
| USB3 Vision: GenICam | EventFrameTriggerMissedTimestamp     |
| Type                 | Integer                              |

## 5.15.5 Event Line1 Falling Edge

The *Event Line1 Falling Edge* feature is notified when the input on Line1 changes from high to low.

The value of this feature has no meaning and should not be read.

| Parameter            | Event Line1 Falling Edge |
|----------------------|--------------------------|
| USB3 Vision: GenICam | EventLine1FallingEdge    |
| Type                 | Integer                  |

The *Event Line1 Falling Edge Timestamp* parameter identifies the point in time when the current line1 falling edge event occurred.

Please refer to the documentation of your camera SDK on how to safely read the timestamp associated with the current event when a notification is received.

| Parameter            | Event Line1 Falling Edge Timestamp |
|----------------------|------------------------------------|
| USB3 Vision: GenICam | EventLine1FallingEdgeTimestamp     |
| Type                 | Integer                            |

## 5.15.6 Event Line1 Rising Edge

The *Event Line1 Rising Edge* feature is notified when the input on Line1 changes from high to low.

The value of this feature has no meaning and should not be read.

| Parameter            | Event Line1 Rising Edge |
|----------------------|-------------------------|
| USB3 Vision: GenICam | EventLine1RisingEdge    |
| Type                 | Integer                 |

The *Event Line1 Rising Edge Timestamp* parameter identifies the point in time when the current line1 rising edge event occurred.

Please refer to the documentation of your camera SDK on how to safely read the timestamp associated with the current event when a notification is received.

| Parameter            | Event Line1 Rising Edge Timestamp |
|----------------------|-----------------------------------|
| USB3 Vision: GenICam | EventLine1RisingEdgeTimestamp     |
| Type                 | Integer                           |

## 5.15.7 Event Test

The *Event Test* feature is notified when a test event occurs.

To generate a test event, use the *Test Event Generate* command.

The value of this feature has no meaning and should not be read.

| Parameter            | Event Test |
|----------------------|------------|
| USB3 Vision: GenICam | EventTest  |
| Type                 | Integer    |

The *Event Test Timestamp* parameter identifies the point in time when the current test event occurred.

Please refer to the documentation of your camera SDK on how to safely read the timestamp associated with the current event when a notification is received.

| Parameter            | Event Test Timestamp |
|----------------------|----------------------|
| USB3 Vision: GenICam | EventTestTimestamp   |
| Type                 | Integer              |

The *Test Event Generate* command can be used to generate a test event.



| Parameter            | Test Event Generate     |
|----------------------|-------------------------|
| Execute              | Generate one test event |
| USB3 Vision: GenICam | TestEventGenerate       |
| Type                 | Command                 |

## 5.16 Chunk Data

Some 38U series devices can send chunk data alongside the capture images, containing additional information about the captured frames.

To enable the transmission of chunk data, [Chunk Mode Active](#) has to be enabled.

To enable specific information to be included as part of the chunk data, select the chunk to enable in [Chunk Selector](#) and then enable [Chunk Enable](#). Please note that certain chunkdata parts can be stuck to always-on.

The way to receive the chunk depends on the used camera SDK. In most cases, a received frame has to be attached to the device's property interface. After that, the chunk's values are readable like other device properties.

### 5.16.1 Chunk Mode Active

The *Chunk Mode Active* parameter enables the transmission of chunk data alongside the image data.

| Parameter            | Chunk Mode Active               |
|----------------------|---------------------------------|
| True                 | Enable chunk data transmission  |
| False                | Disable chunk data transmission |
| USB3 Vision: GenICam | ChunkModeActive                 |
| Type                 | Boolean                         |

### 5.16.2 Chunk Selector

The *Chunk Selector* parameter selects a chunkdata item to configure.

| Parameter            | Chunk Selector             |
|----------------------|----------------------------|
| ExposureTime         | Selects ExposureTime chunk |
| Gain                 | Selects Gain chunk         |
| USB3 Vision: GenICam | ChunkSelector              |
| Type                 | Enumeration                |

## 5.16.3 Chunk Enable

The *Chunk Enable* parameter enables or disables the chunkdata item selected by *Chunk Selector*.

| Parameter            | Chunk Enable                         |
|----------------------|--------------------------------------|
| True                 | Enables the selected chunkdata part  |
| False                | Disables the selected chunkdata part |
| USB3 Vision: GenICam | ChunkEnable                          |
| Type                 | Boolean                              |

## 5.16.4 Chunk Exposure Time

The *Chunk Exposure Time* parameter contains the exposure time used when capturing the image.

| Parameter            | Chunk Exposure Time |
|----------------------|---------------------|
| Minimum              | 1 $\mu$ s           |
| Maximum              | 4 s                 |
| USB3 Vision: GenICam | ChunkExposureTime   |
| Type                 | Float               |

## 5.16.5 Chunk Gain

The *Chunk Gain* parameter contains the gain value used when capturing the image.

| Parameter            | Chunk Gain |
|----------------------|------------|
| Minimum              | 0 dB       |
| Maximum              | 48 dB      |
| USB3 Vision: GenICam | ChunkGain  |
| Type                 | Float      |

## 5.17 Bandwidth Control

When using multiple 38U series devices connected to the same host controller, the data rate has to be considered to allow consistent operation.

To limit the bandwidth of a camera, set [Device Link Throughput Limit Mode](#) to On, and set [Device Link Throughput Limit](#) to the desired maximum data rate.

## 5.17.1 Device Link Throughput Limit Mode

The *Device Link Throughput Limit Mode* parameter enables or disables the effect of [Device Link Throughput Limit](#).

If set, the camera's internal frame rate is automatically reduced to fit into the available bandwidth.

| Parameter            | Device Link Throughput Limit Mode                                                                                |
|----------------------|------------------------------------------------------------------------------------------------------------------|
| Off                  | The bandwidth the device uses for streaming is unlimited.                                                        |
| On                   | The maximum bandwidth the device uses for streaming is defined by <a href="#">Device Link Throughput Limit</a> . |
| USB3 Vision: GenICam | DeviceLinkThroughputLimitMode                                                                                    |
| Type                 | Enumeration                                                                                                      |

## 5.17.2 Device Link Throughput Limit

The *Device Link Throughput Limit* parameter defines the maximum bandwidth used by the device to stream data.

[Device Link Throughput Limit Mode](#) must be set to `On` for *Device Link Throughput Limit* to have an effect.

| Parameter            | Device Link Throughput Limit |
|----------------------|------------------------------|
| Minimum              | 1000000 Mbps                 |
| Maximum              | 400000000 Mbps               |
| USB3 Vision: GenICam | DeviceLinkThroughputLimit    |
| Type                 | Integer                      |

## 6 Status LEDs

### 6.1 RGB Status LED

The camera has one RGB status LED on its rear side.

| Color                    | Description                                           |
|--------------------------|-------------------------------------------------------|
| Blue                     | Idle                                                  |
| Green                    | Stream active, not sending images (e.g. Trigger Mode) |
| Yellow                   | Stream active, sending images                         |
| Red, various blink codes | Camera error. Please contact support.                 |



## 7 Revision History

| Date       | Version       | Description                                                                                         |
|------------|---------------|-----------------------------------------------------------------------------------------------------|
| 2021/10/27 |               | Initial release of this document                                                                    |
| 2023/07/19 |               | Updated environmental section in quick facts chapter.                                               |
| 2024/01/09 | Firmware 1554 | Add ChunkExposureTime, ChunkGain features                                                           |
| 2024/01/09 | Firmware 1554 | Add EventExposureEnd, EventFrameTriggerMissed, EventLine1RisingEdge, EventLine1FallingEdge features |
| 2024/11/13 | Firmware 1732 | Add DeviceLinkThroughputLimit feature                                                               |



## DFK 38UX540 Technical Reference Manual

All product and company names in this document may be trademarks and tradenames of their respective owners and are hereby acknowledged.

The Imaging Source Europe GmbH cannot and does not take any responsibility or liability for any information contained in this document. The source code presented in this document is exclusively used for didactic purposes. The Imaging Source does not assume any kind of warranty expressed or implied, resulting from the use of the content of this document or the source code.

The Imaging Source Company reserves the right to make changes in specifications, function or design at any time and without prior notice.

Last update: April 2025

© 2025 The Imaging Source

All rights reserved. Reprint, also in parts, only allowed with permission of The Imaging Source Europe GmbH.

All weights and dimensions are approximate. Unless otherwise specified, the lenses shown in the context of cameras are not shipped with these cameras.

### Headquarters:

*The Imaging Source Europe GmbH  
Überseetor 18, D-28217 Bremen, Germany  
Phone: +49 421 33591-0*

### North & South America:

*The Imaging Source, LLC  
4600 Park Road, Suite 470, Charlotte, NC 28209, United States  
Phone: +1 877-462-4772*

### Asia Pacific:

*The Imaging Source Asia Co., Ltd.  
3F., No. 43-7/8, Zhongxing Road  
Xizhi District, New Taipei City 221012, Taiwan  
Phone: +886 2-2792-3153*

[www.theimagingsource.com](http://www.theimagingsource.com)