




Technical Details

Industrial Cameras: Getting Started with USB 3.1 Board Cameras 37 Series




Getting Started with USB 3.1 Board Cameras 37 Series

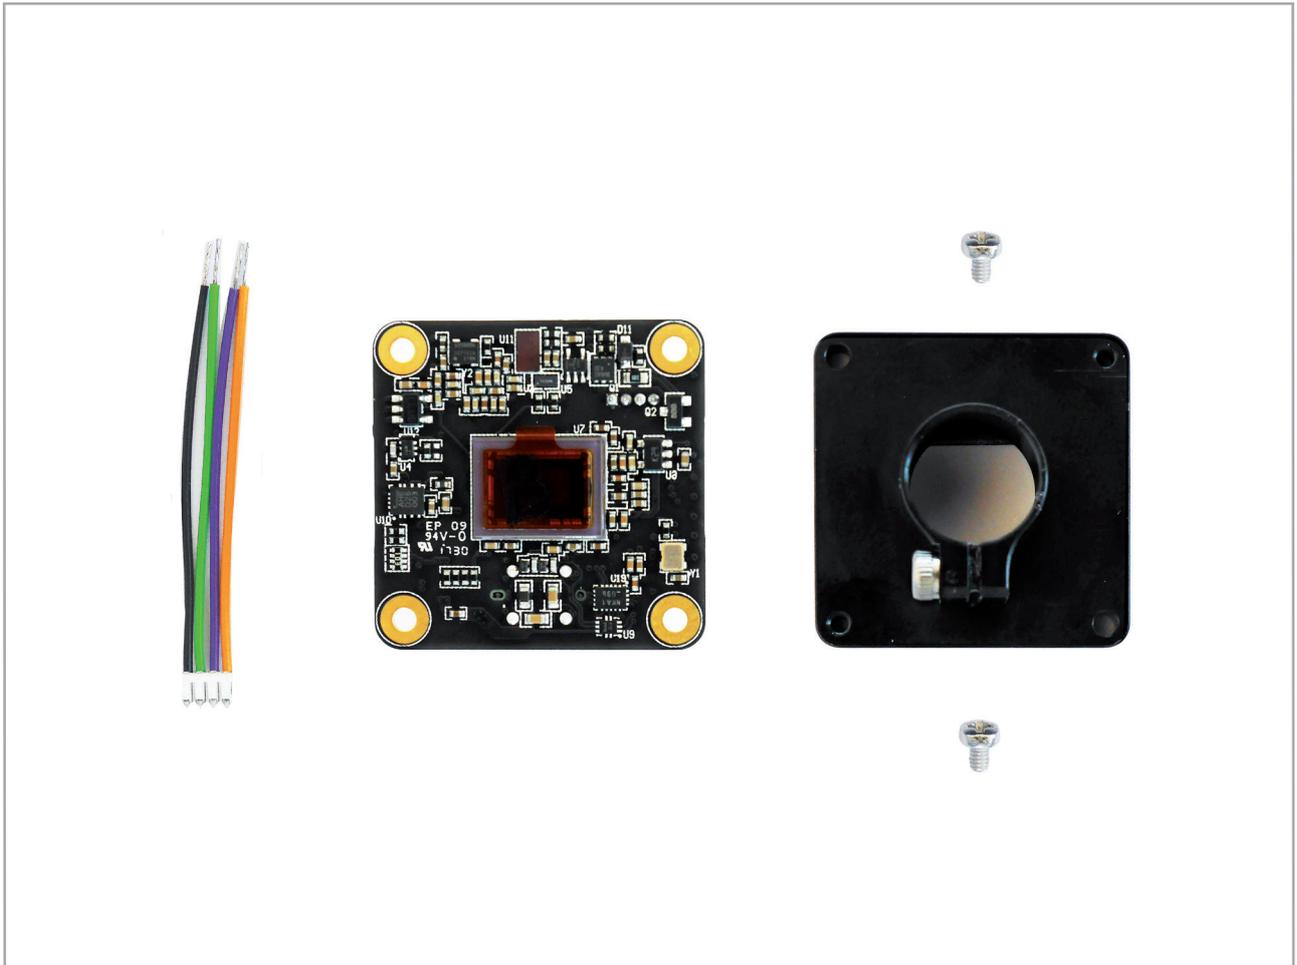

- **Please note:** lens holder (above, right) must be purchased separately.




Getting Started with USB 3.1 Board Cameras 37 Series

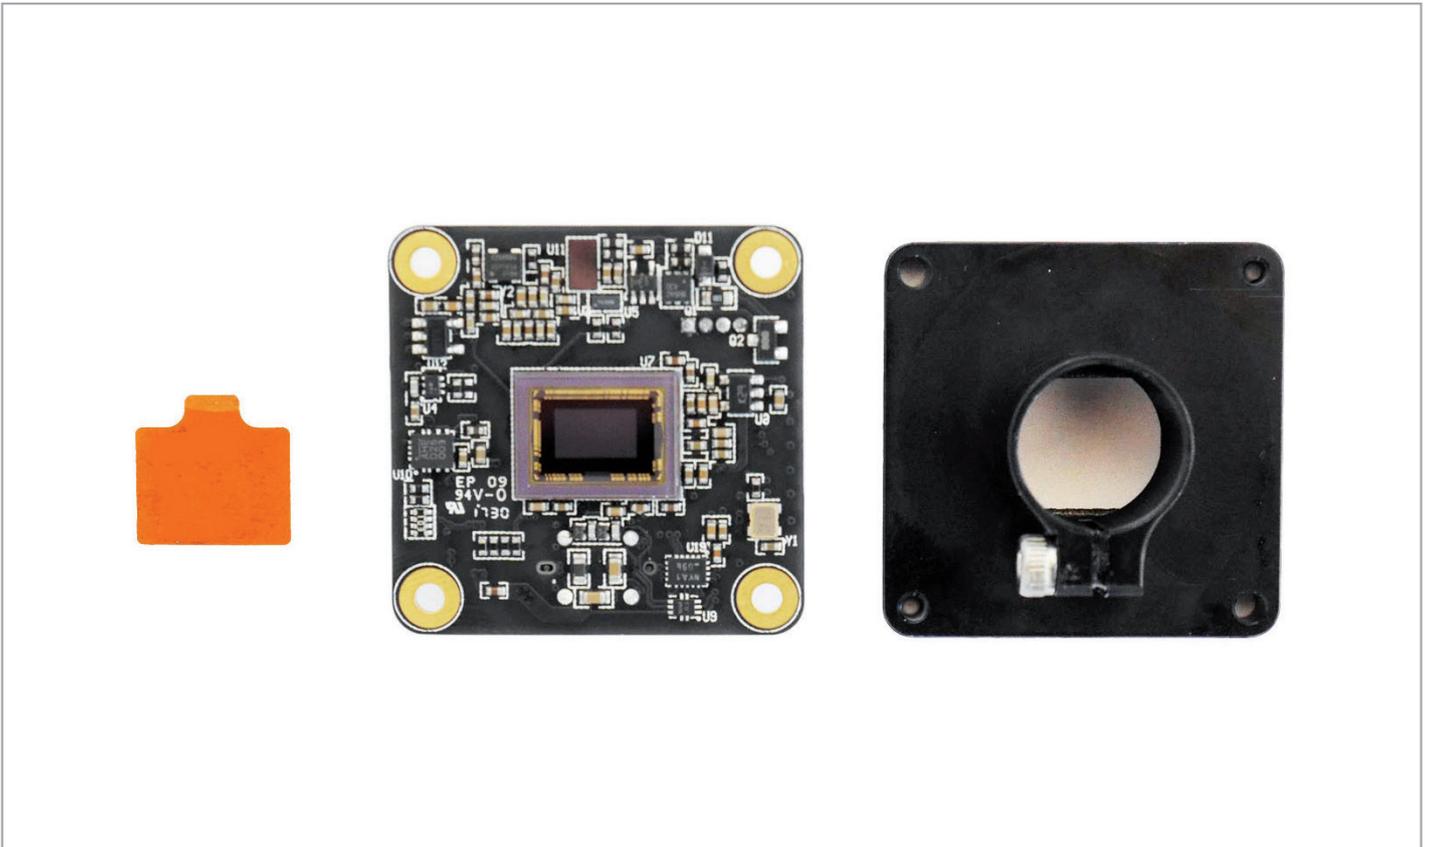


- Remove protective foil from the sensor.



Getting Started with USB 3.1 Board Cameras 37 Series

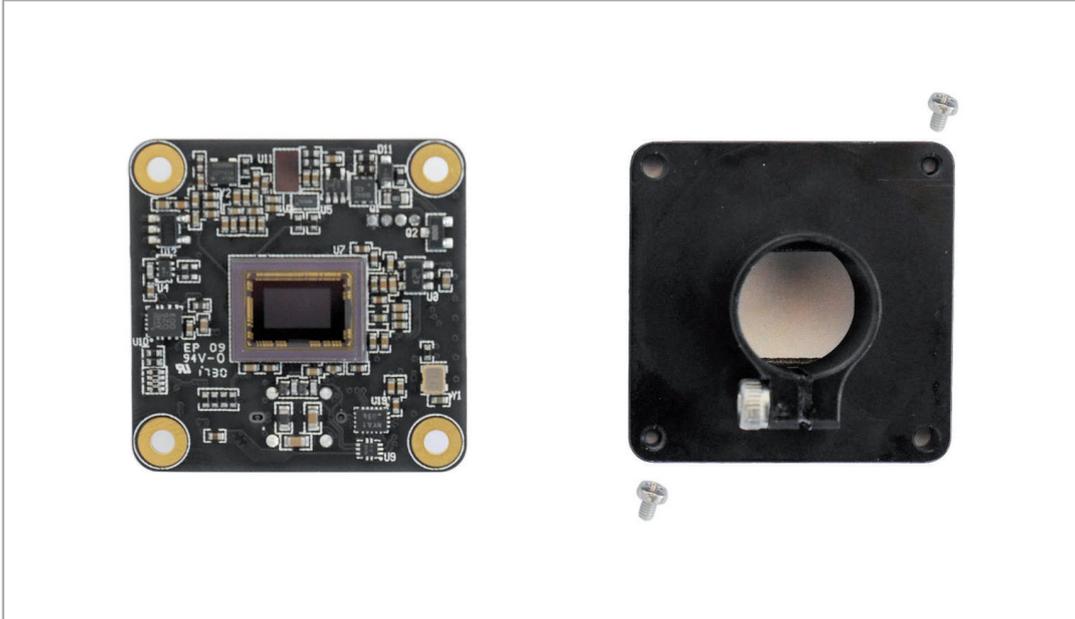


- With the orientation of the PCB and lens holder as shown in the photo, set the lens holder on top of the sensor.

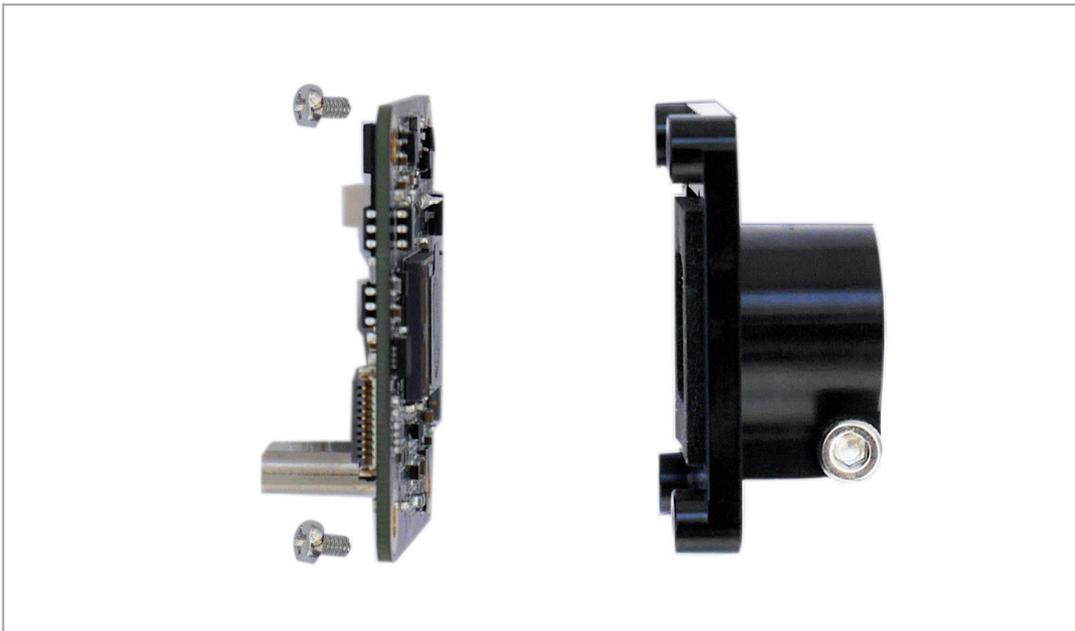


- Side view of correctly positioned PCB and lens holder. Place the provided screws into the **smaller** holes in the back of the PCB to affix the lens holder to the PCB.



Getting Started with USB 3.1 Board Cameras 37 Series

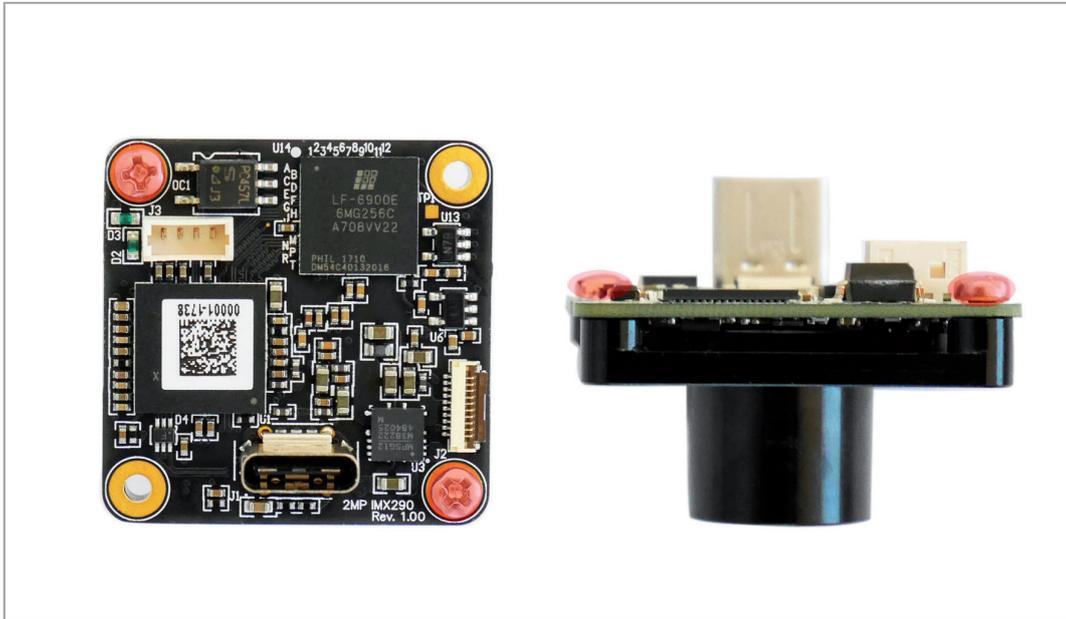

- Correct placement of provided screws shown in red. Camera is now ready for use. Remaining holes can be used to affix the camera to other hardware.

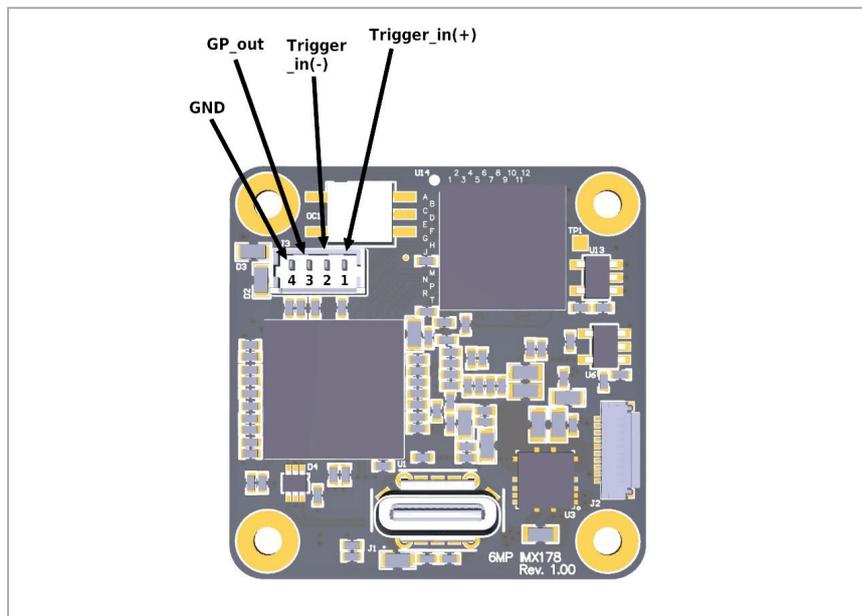

- Pin assignment



Industrial Cameras: Getting Started with USB 3.1 Board Cameras 37 Series



Headquarters: The Imaging Source Europe GmbH
Überseetor 18, D-28217 Bremen, Germany
Phone: +49 421 33591-0

North & South America: The Imaging Source, LLC
6926 Shannon Willow Rd, S 400, Charlotte, NC 28226, USA
Phone: +1 704-370-0110

Asia Pacific: The Imaging Source Asia Co. Ltd.
2F, No. 8, Xinhua 1st Road, Taipei City 114, Neihu District, Taiwan
Phone: +886 2-2577-1228
www.theimagingsource.com

All product and company names in this document may be trademarks and tradenames of their respective owners and are hereby acknowledged.

The Imaging Source Europe GmbH cannot and does not take any responsibility or liability for any information contained in this document. The source code presented in this document is exclusively used for didactic purposes. The Imaging Source does not assume any kind of warranty expressed or implied, resulting from the use of the content of this document or the source code.

The Imaging Source Company reserves the right to make changes in specifications, function or design at any time and without prior notice.

Last update: May 2019

Copyright © 2019 The Imaging Source Europe GmbH, wpubs31board37series.en_US.pdf

All rights reserved. Reprint, also in parts, only allowed with permission of The Imaging Source Europe GmbH.

All weights and dimensions are approximate. Unless otherwise specified the lenses shown in the context of cameras are not shipped with these cameras.